
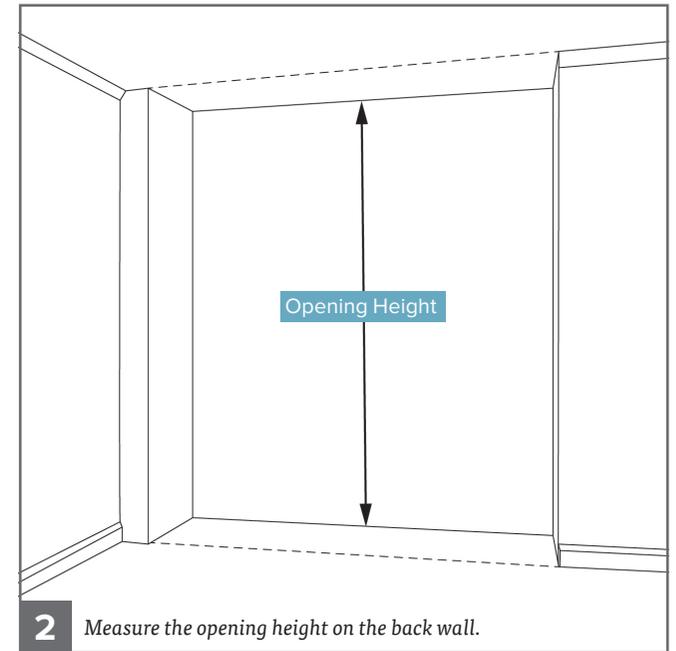


HOW TO MEASURE UP FOR PREMIER STORAGE

Assembly Instructions

TOOLS REQUIRED:

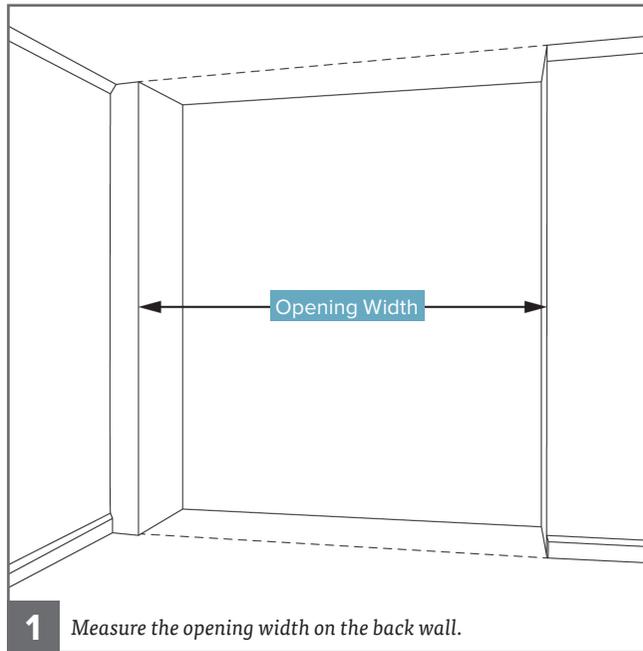

Now you have measurements, divide your space into either 530mm or 1030mm sections.

FOR **500mm** WIDE ACCESSORIES ALLOW

530mm

FOR **1000mm** WIDE ACCESSORIES ALLOW

1030mm

These measurements are from the centres of each stanchion.