

BEDSIDE UNIT


(450MM WIDE)

Assembly Instructions


CONTENTS:

- 1x Top panel
- 1x Back panel
- 1x Side panel (right)
- 1x Side panel (left)
- 1x Drawer infill panel
- 1x Base
- 4x Soft close drawer runners
(2x left, 2x right)
- 1x Metal infill strip
- 2x Drawer backs
- 2x Drawer sides (left)
- 2x Drawer sides (right)
- 2x Drawer fronts
- 2x Drawer bases
- 4x Legs

BEDSIDE UNIT

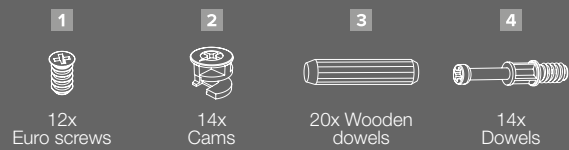

DRAWER PACK

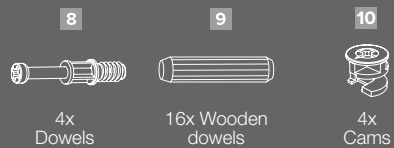

*A drop of glue needs to be added into all holes the wooden dowels are placed into (items 3 & 9).

RECOMMENDED:

- Tools: Pozidrive screwdriver

! We recommend assembling on a soft surface (e.g a carpet). If this isn't possible, use a protective cover on your hard surface floor.

