


HOW TO FIT END PANELS

Assembly Instructions

TOOLS REQUIRED:

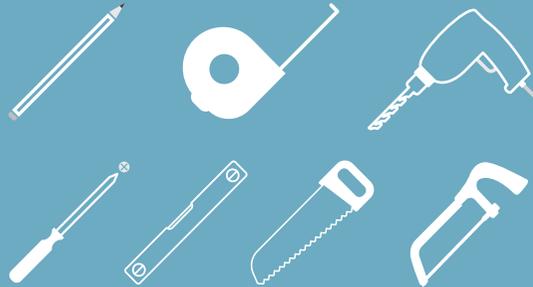


Please check your opening for any hidden electrical wires and water pipes before / screwing.



Screws not supplied. Use suitable screws and plugs.


spaceslide®
we make room

V1

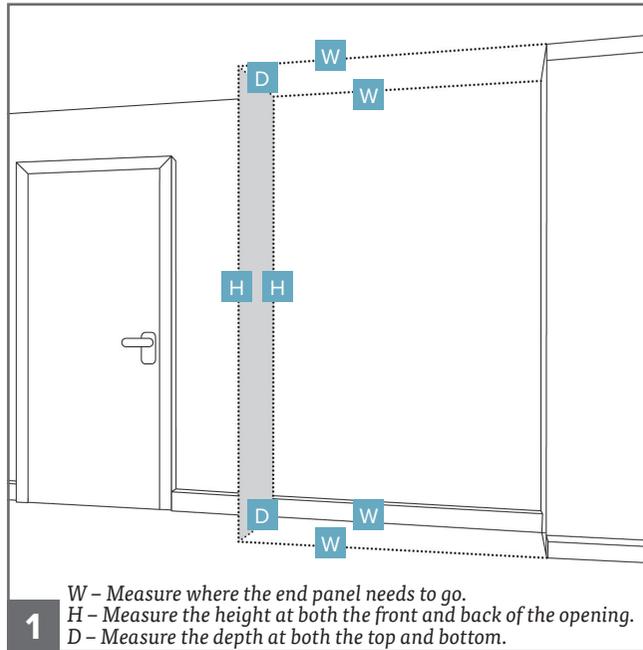


1

W – Measure where the end panel needs to go.
H – Measure the height at both the front and back of the opening.
D – Measure the depth at both the top and bottom.

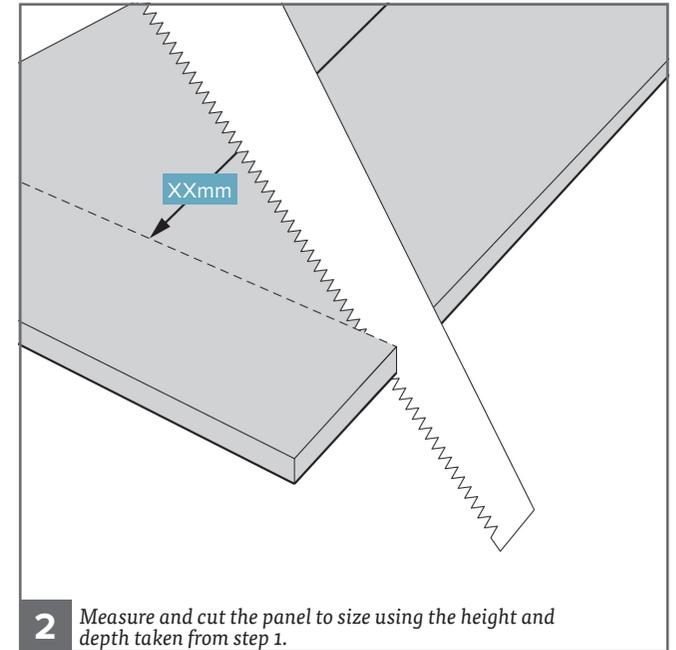


2

Measure and cut the panel to size using the height and depth taken from step 1.

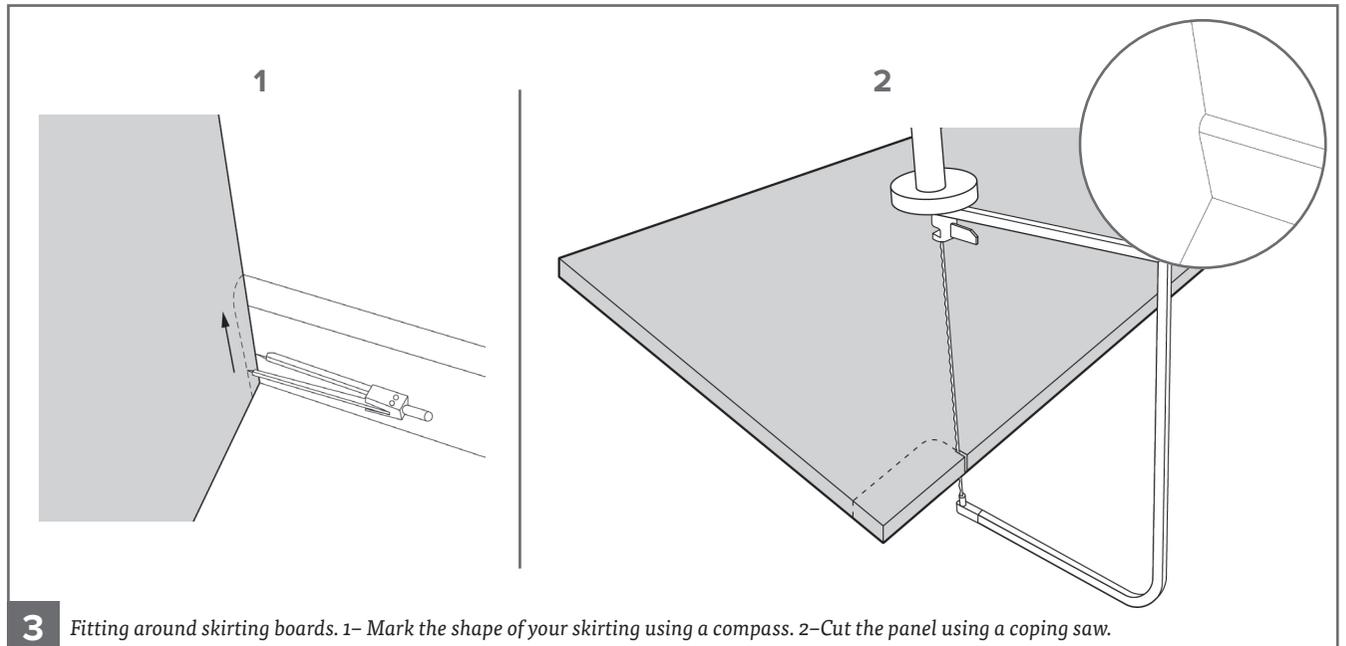


3

Fitting around skirting boards. 1– Mark the shape of your skirting using a compass. 2–Cut the panel using a coping saw.

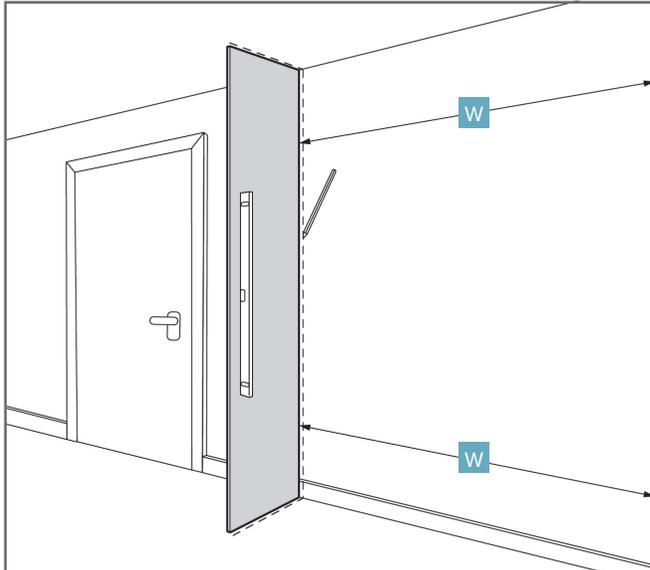


4

Position end panel to make sure it fits.
Level up and mark the position on the wall, ceiling and floor.
Tip: Make sure to mark up using the internal measurement.

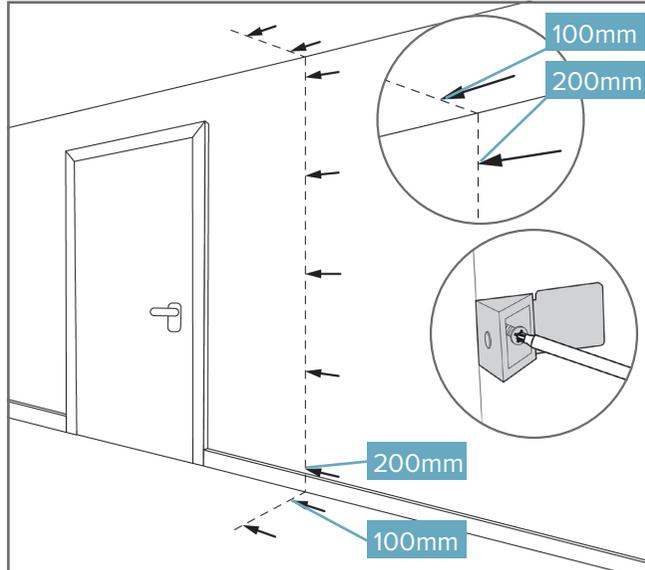

5

Move the end panel to one side. Using the marked lines, fix the fixing blocks to the wall, ceiling and floor using suitable plugs and screws.

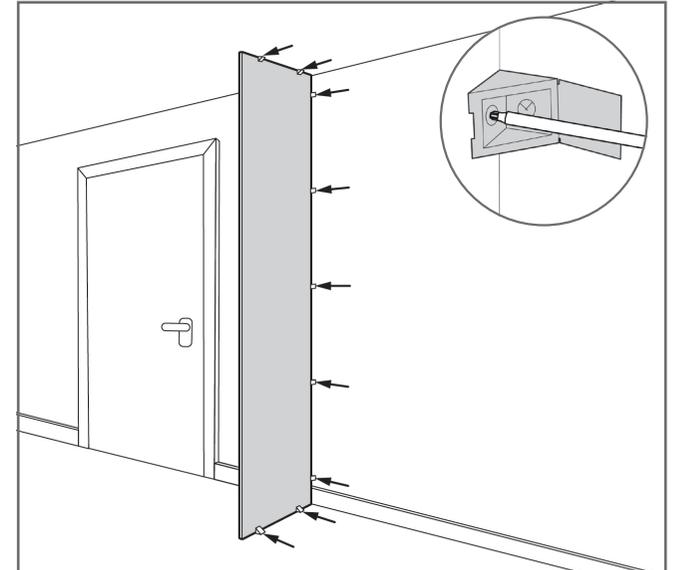

6

Place end panel back into position and fix. We recommend using 16mm screws.