
HOW TO FIT PREMIER STORAGE

Assembly Instructions

TOOLS REQUIRED:

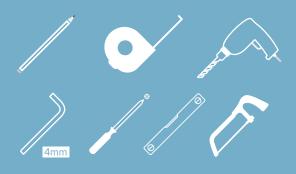

Please check your opening for any hidden electrical wires and water pipes before / screwing.




Screws not supplied. Use suitable screws and plugs.


spaceslide we make room


FIXING STANCHIONS


You can use the 'How to Measure Up' guide to ensure your space has been measured correctly.


(In this example we have used Storage kit 14. 1000mm section on the left, 500mm mid-section followed by another 1000mm section on the right).

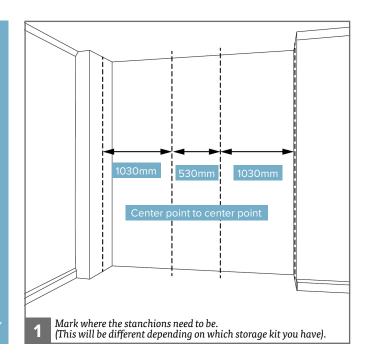


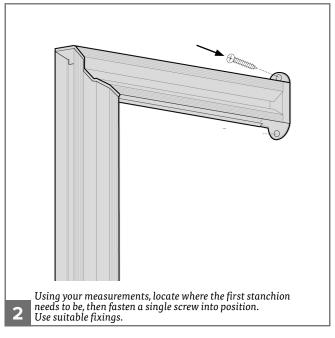


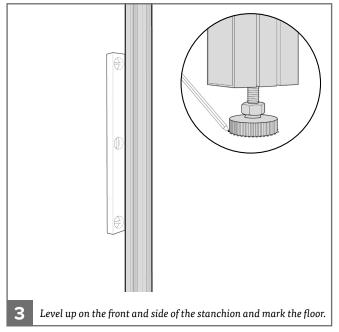

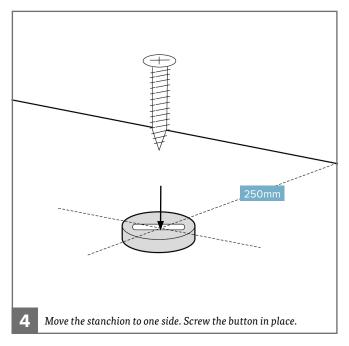


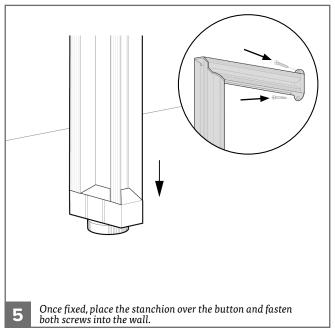


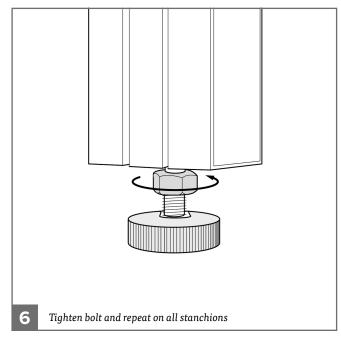


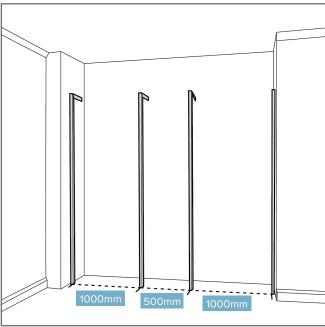





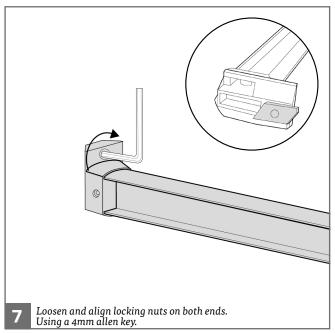


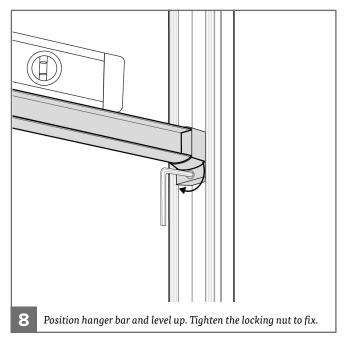


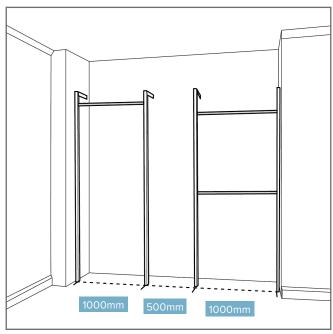

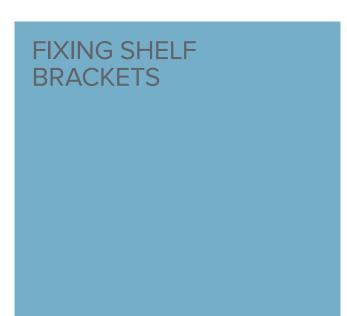


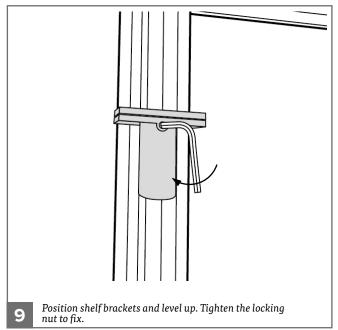


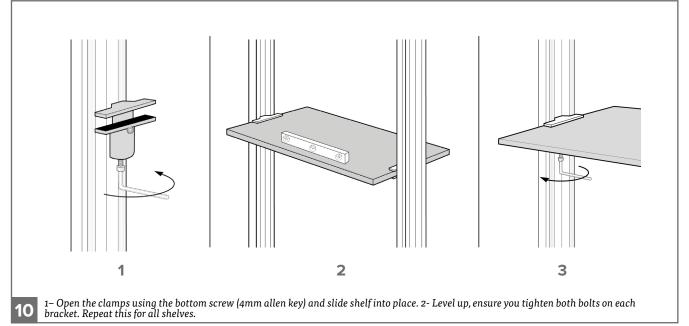


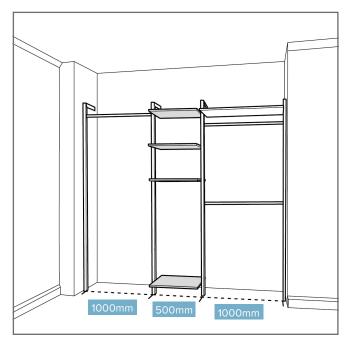





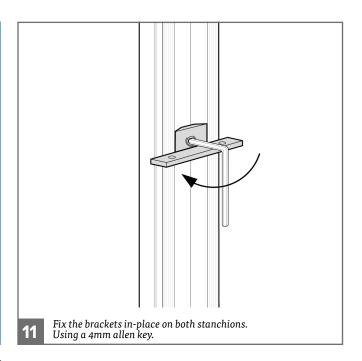


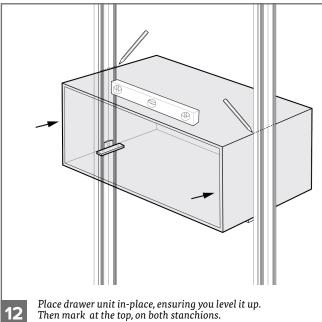


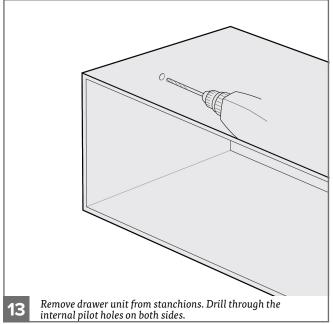

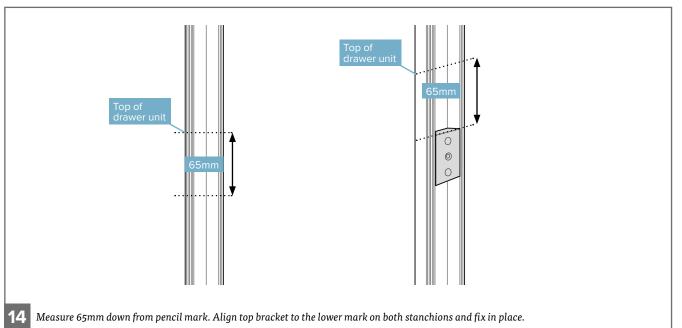


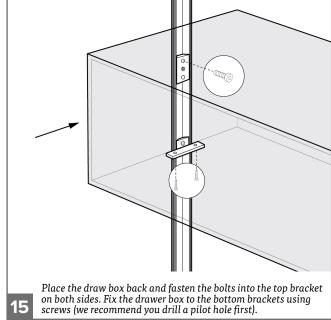


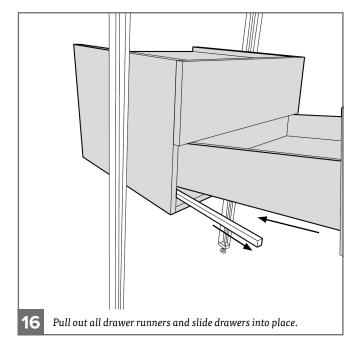

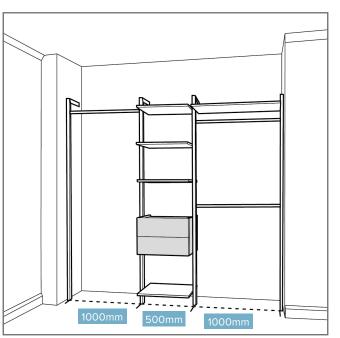

FIXING SHOE RACKS

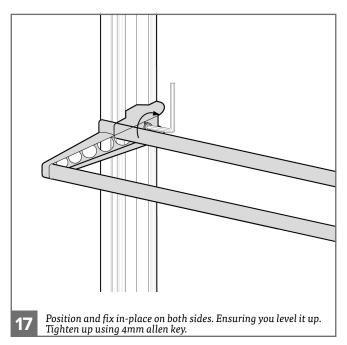

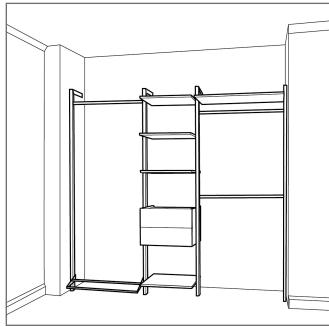

CUTTING/ADJUSTING THE STANCHIONS

If you need to cut down the stanchions for any reason follow the next steps.

