HOW TO FIT STANDARD STORAGE

Assembly Instructions

TOOLS REQUIRED:



Please check your opening for any hidden electrical wires and water pipes before / screwing.




Screws not supplied. Use suitable screws and plugs.


V1





2100mm 2100mm 2100mm


Measure and mark 2100mm up from the floor on the back and side walls.

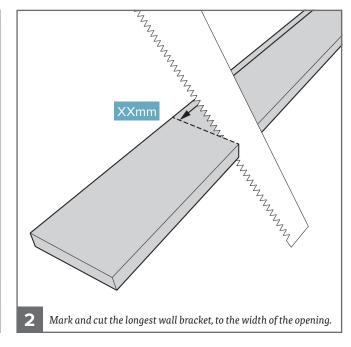


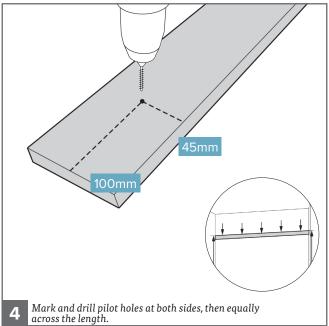


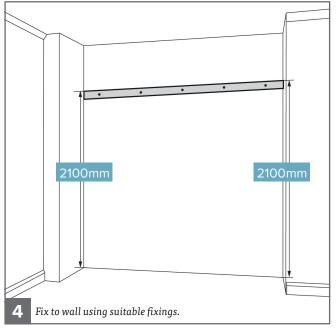


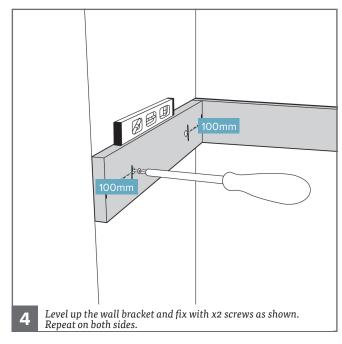


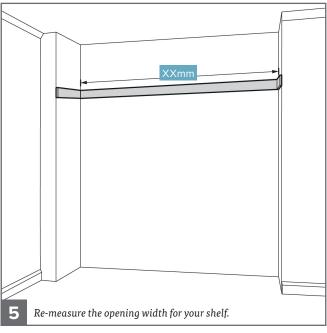


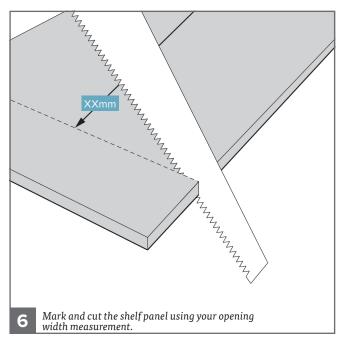


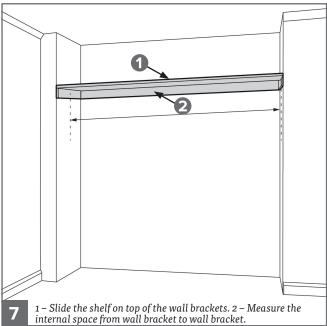


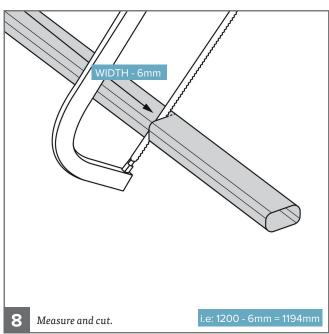

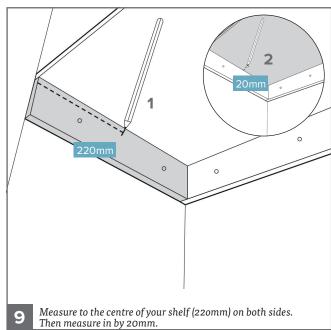

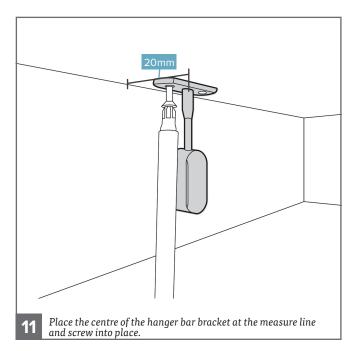

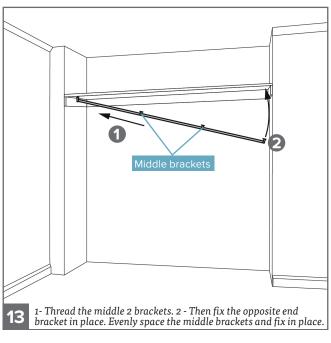

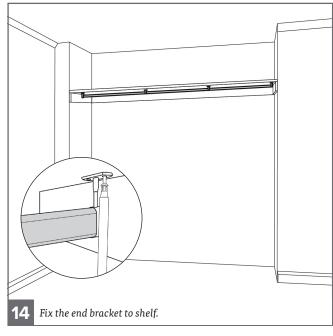

If your opening space is wider than 1.2m then we recommend fitting the vertical support as well.

