

TOWER UNIT 2 DRAWERS

(450, 600 & 800MM WIDE)

Assembly Instructions

CONTENTS:

- A** 1x Top panel (498mm Depth)
(Panel A is not required when paired with the Shelf and Hanger unit).
- B** 1x Side panel (left)
- C** 1x Side panel (right)
- D** 3x Shelves (495mm Depth)
- E** 3x Plinth panel
- F** 4x Soft close drawer runners
- G** 1x Bottom shelf (451mm Depth)
- H** 4x Drawer sides
- I** 2x Drawer base
- J** 2x Drawer fronts
- K** 2x Drawer backs

TOWER UNIT PACK

- | | | | |
|---|---|---|--|
| 1 | 2 | 3 | 4 |
|  |  |  |  |
| 26x
Cams | 26x
Dowels | 32x
Wooden
dowels | 1x
Glue* |

DRAWER PACK

- | | | | |
|---|---|---|--|
| 5 | 6 | 7 | 8 |
|  |  |  |  |
| 12x
Euro
screws | 4x
Cams | 4x
Dowels | 16x
Wooden
dowels |

PLEASE NOTE:


*A drop of glue needs to be added into all holes the wooden dowels are placed into (item 3 & 8).

RECOMMENDED:


- Tools: Pozidrive screwdriver
- Two person build 




We recommend you fix the Tower Unit to a wall (where possible).
This will prevent the unit being pulled over. Use suitable wall fixings.

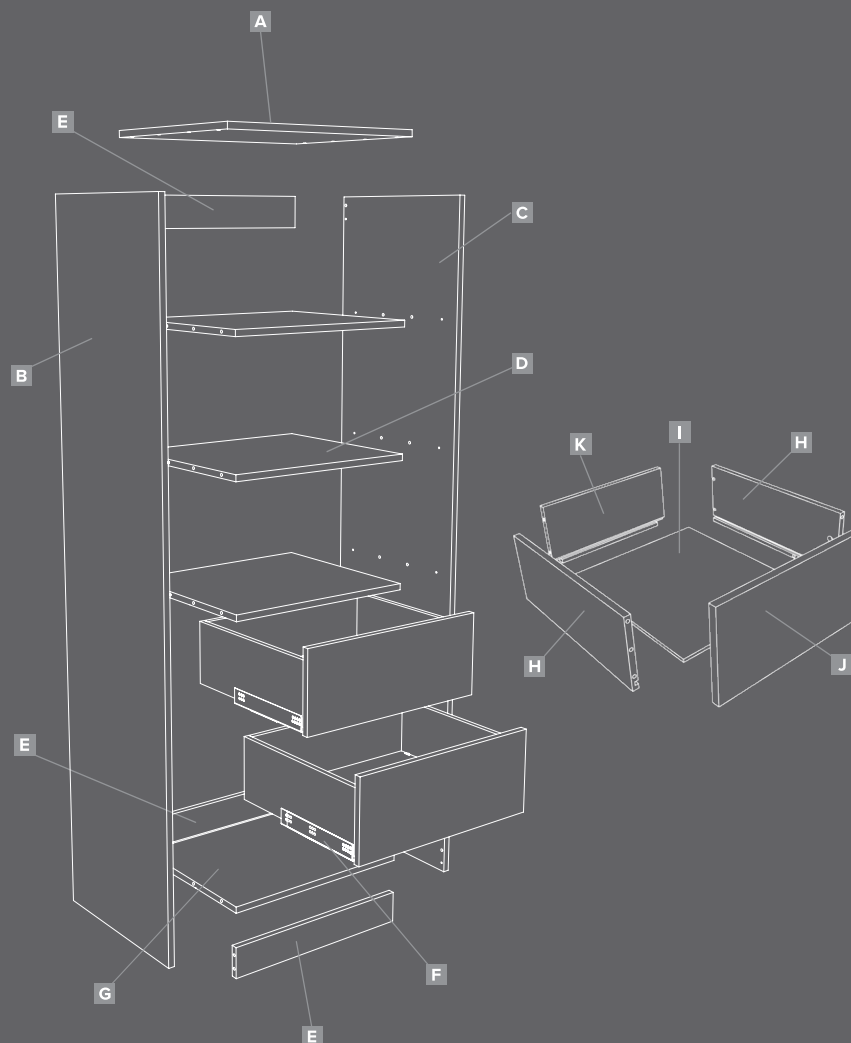


Note: Panel B shown.

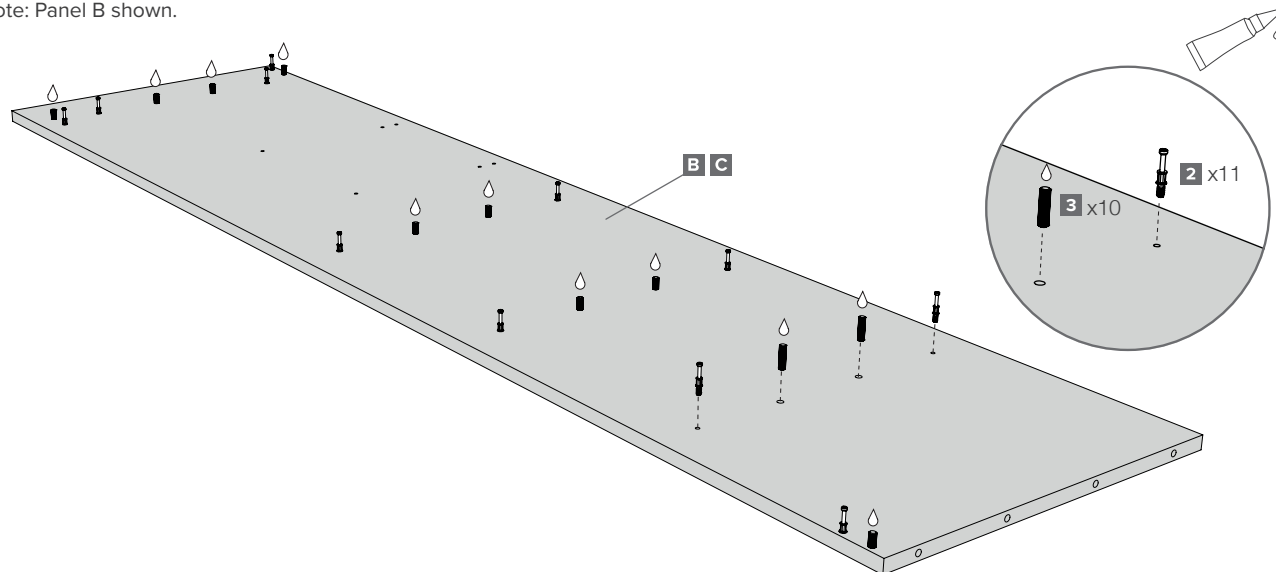


1 Lay panels (B&C) on a flat surface. Fit cams & dowels to both panels.
(All wooden dowels (3) are shown with a glue drop above).

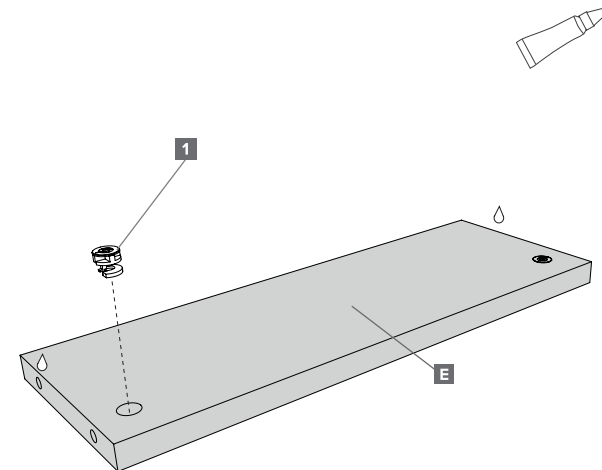


2 Fit cams to all E panels (X3) as shown.

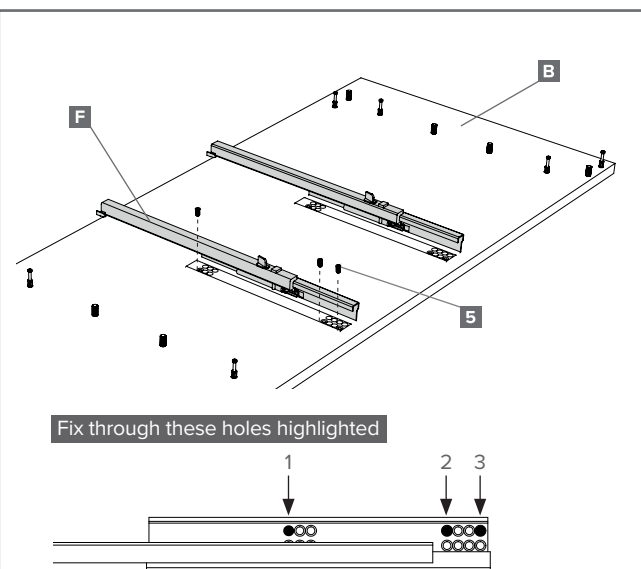






3 Fit the drawer runners to both B&C panels, making sure to secure through the correct holes (as shown).

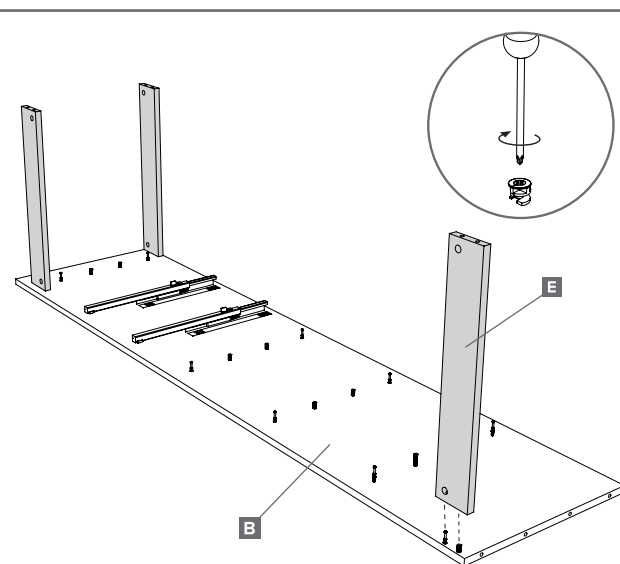


4 Fit panel E (X3), to Panel B, then tighten each cam to lock into place.

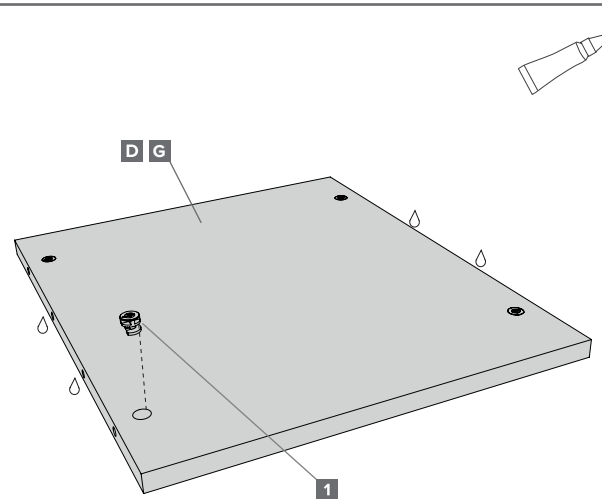


5 Fit cams to all D panels (X3) and G panel (X1).

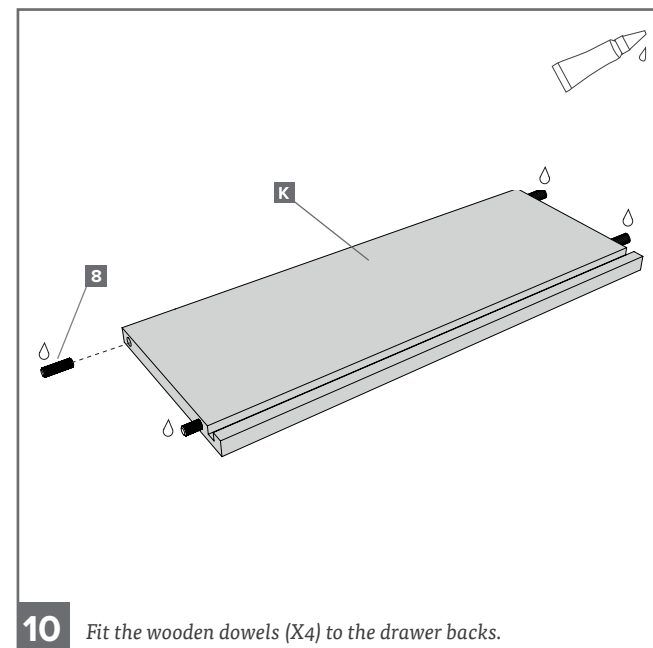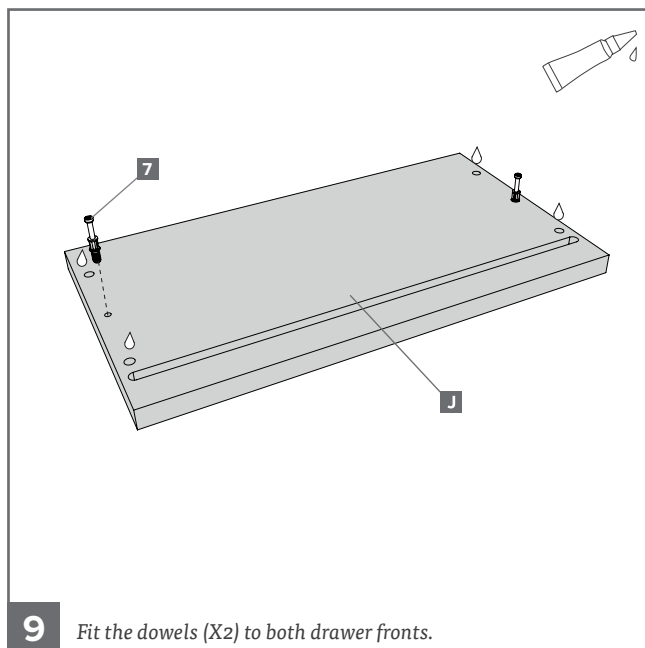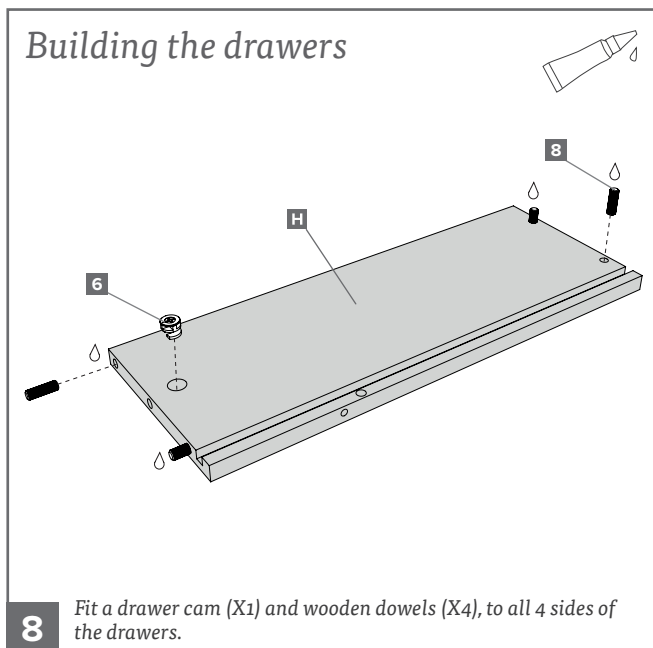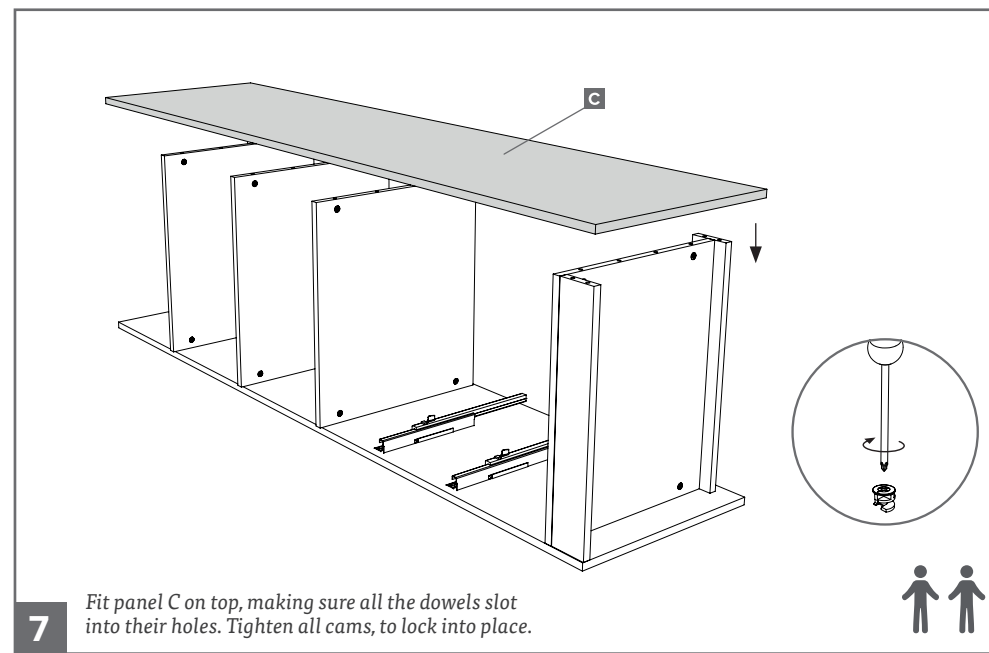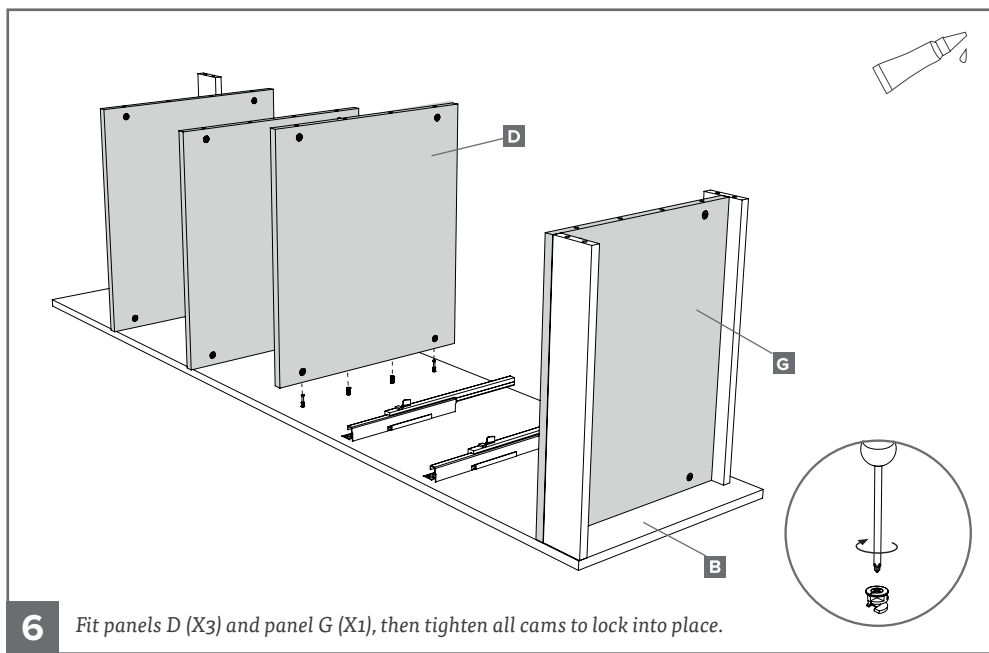


Note: Repeat step on all drawers.

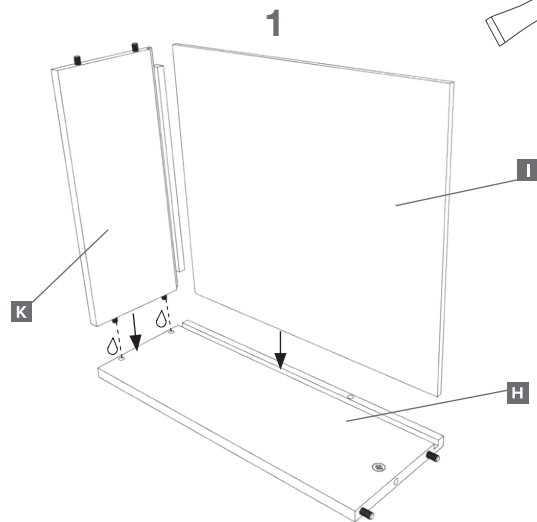

11 Lay drawer side (H) on a flat surface, insert the base (I) into the groove then slot the back panel (K) in place.

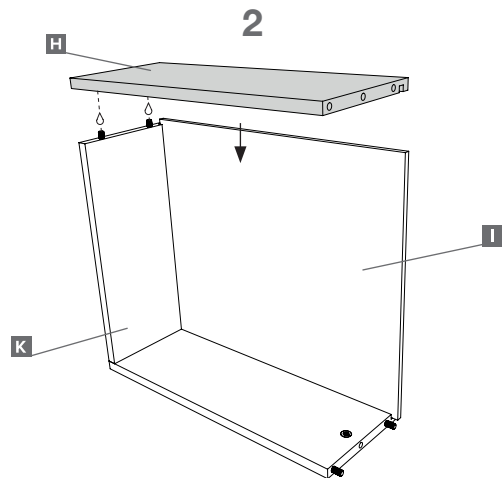


Place the reverse drawer side over the base, making sure the panel slots into the groove and dowels into the holes.

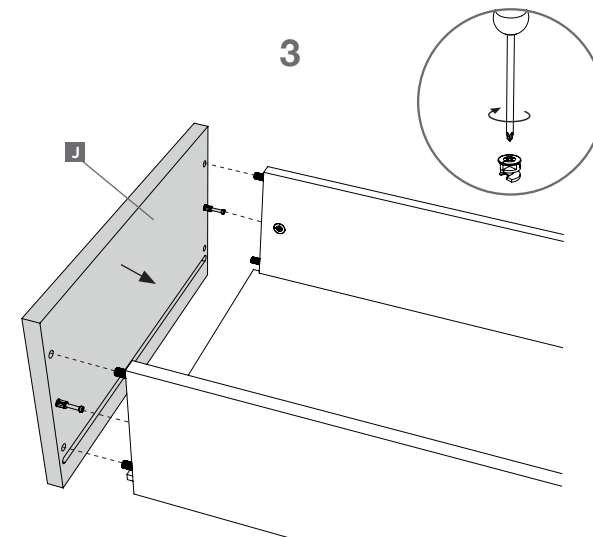


Fit the drawer front into position making sure the base slots into place and dowels into the holes. Tighten the cams to secure.

Note: Repeat step on all drawers.

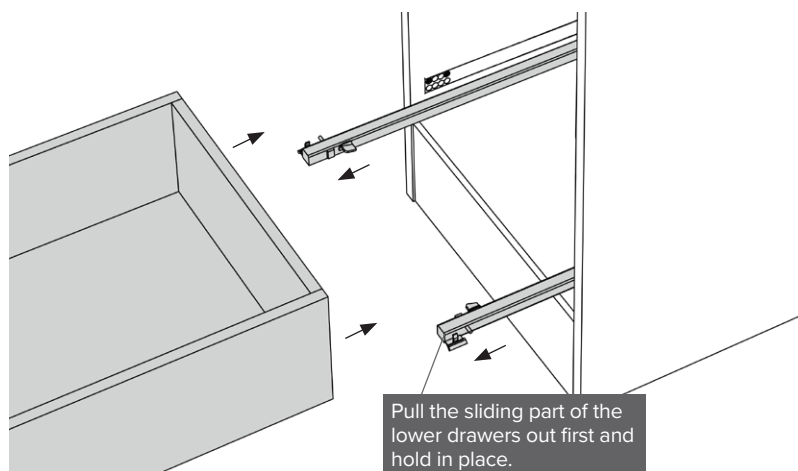

Pull the sliding part of the lower drawers out first and hold in place.

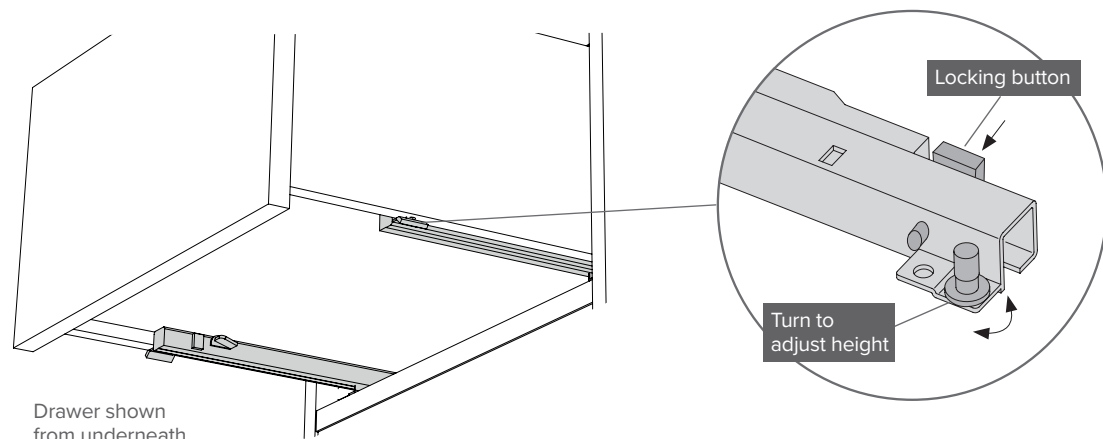

Drawer shown from underneath.

Push in the Locking button to lock the drawer onto the drawer runner. Adjust the knob if the drawers are out of alignment.




12 Pull the sliding part of the drawer runners out. Whilst holding the runners in place, sit the drawer on top and carefully slide the drawer back until the drawer clicks into place.

Installing without a Shelf and Hanger unit:

If a Shelf and Hanger unit is NOT being paired with this tower unit - follow steps 13 & 14.

Installing with a Shelf and Hanger unit:

Go to step 16 when installing with a Shelf and Hanger unit.

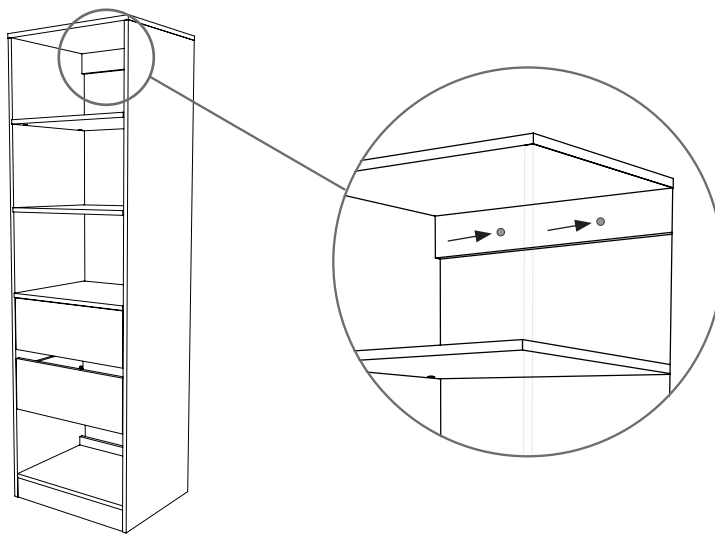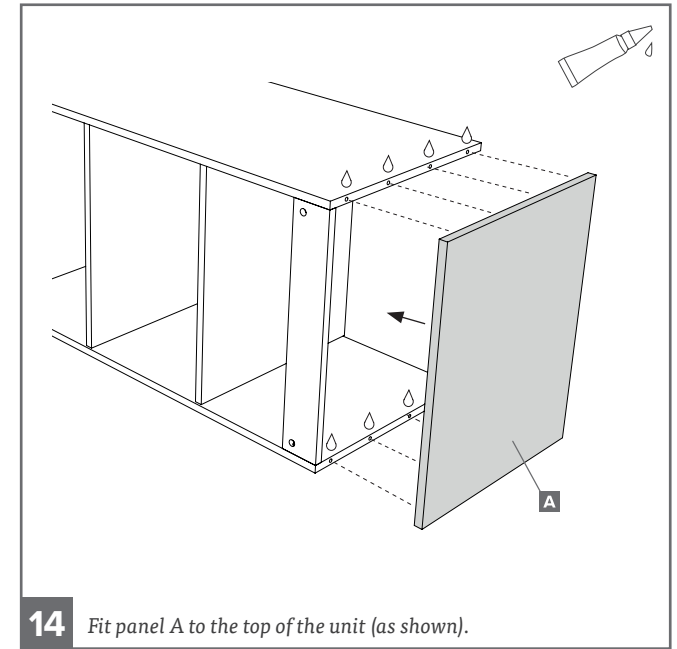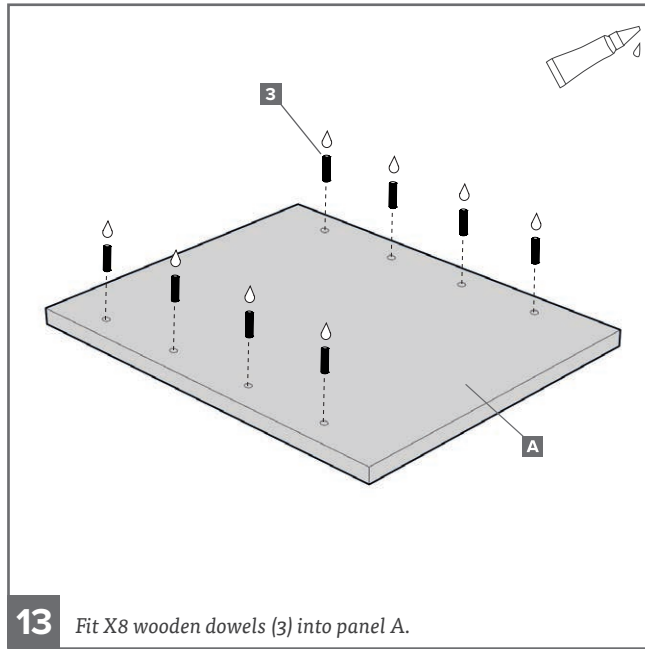


IMPORTANT: Make sure to secure the unit to a wall using suitable fixings, to avoid the unit from being pulled over. We recommend drilling pilot holes before securing to the wall.



15 Stand the unit up and into position (we advise 2 people to do this). Once in position, secure into place.


Combining the tower unit with the Shelf & Hanger unit.

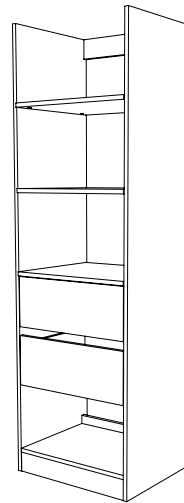

16 Stand the unit up and move into position.




Layout possibilities

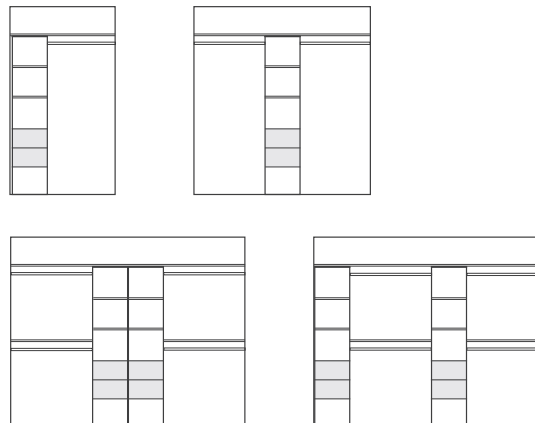

17 The long shelf of the Shelf and Hanger unit will replace 'panel A' on top of the Tower unit (as shown). Follow the Shelf and Hanger instructions regarding the installation of this product.



Scribing around skirting boards

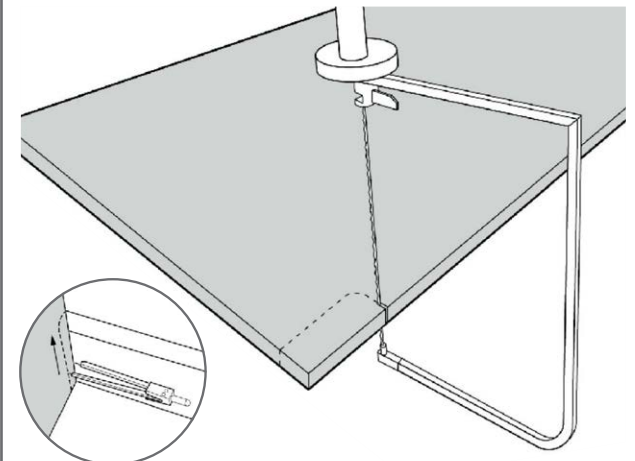

Optional - To cut around your skirting boards, mark the panels in the necessary location and cut the panels to suit.

A GUIDE TO FIXINGS



Wall & Ceiling Fixings: You must first identify the type of wall or ceiling you intend to fix product onto and then contact your local hardware store if the fixings supplied are not suited to your wall or ceiling type. Care and Maintenance: Safety: Always check the fitting and location to ensure your safety in and around the home. Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

IMPORTANT NOTE: When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and plugs being used are suitable for supporting your unit. Always consult a qualified trades person if you are unsure.

Tips: 1. Ensure you use the recommended drill bit to match the wall plug and hole size.

Tips: 2. Ensure you drill the hole straight, do not force the drill or enlarge the hole.


Tips: 3. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

Tips: 4. Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Structures:


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

1: General Purpose / Concrete or Block Work wall plug. NOT supplied.

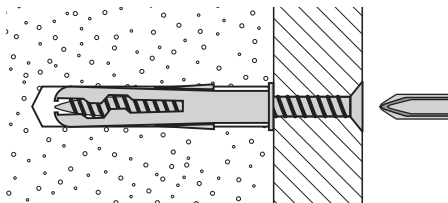


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

2: Plasterboard wall plug. NOT supplied.

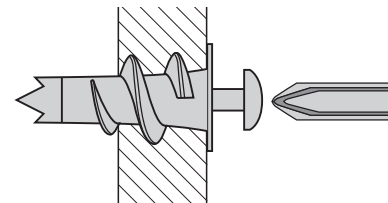


For use when attaching light loads on to plasterboard partitions.

3: Cavity Fixing wall plug. NOT supplied.

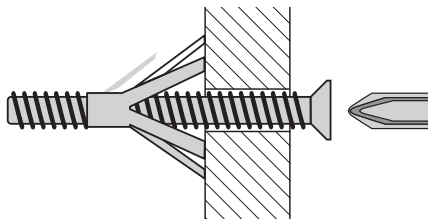

For use with plasterboard partitions or hollow wooden doors.

4: Wooden Structure. NOT supplied.

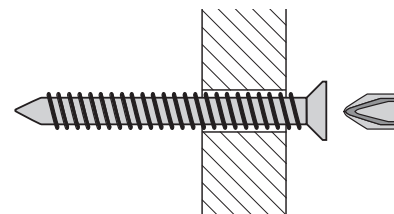

If you know you are fixing directly into a wooden batten, the screws provided do not require a plug.