

HOW TO FIT THE STANDARD SHELF AND HANGER

Assembly Instructions

CONTENTS:

- A** X1 Shelf
- B** X2 Side wall liners
- C** X1 Back wall liner
- D** X1 Vertical support
- E** X1 Hanger bar
- F** X1 Centre bracket
- G** X2 U-Bracket
- H** X2 Side brackets

TOOLS REQUIRED










RECOMMENDED:

- Tools: Pozidrive screwdriver
- Two person build




Use suitable wall fixings.

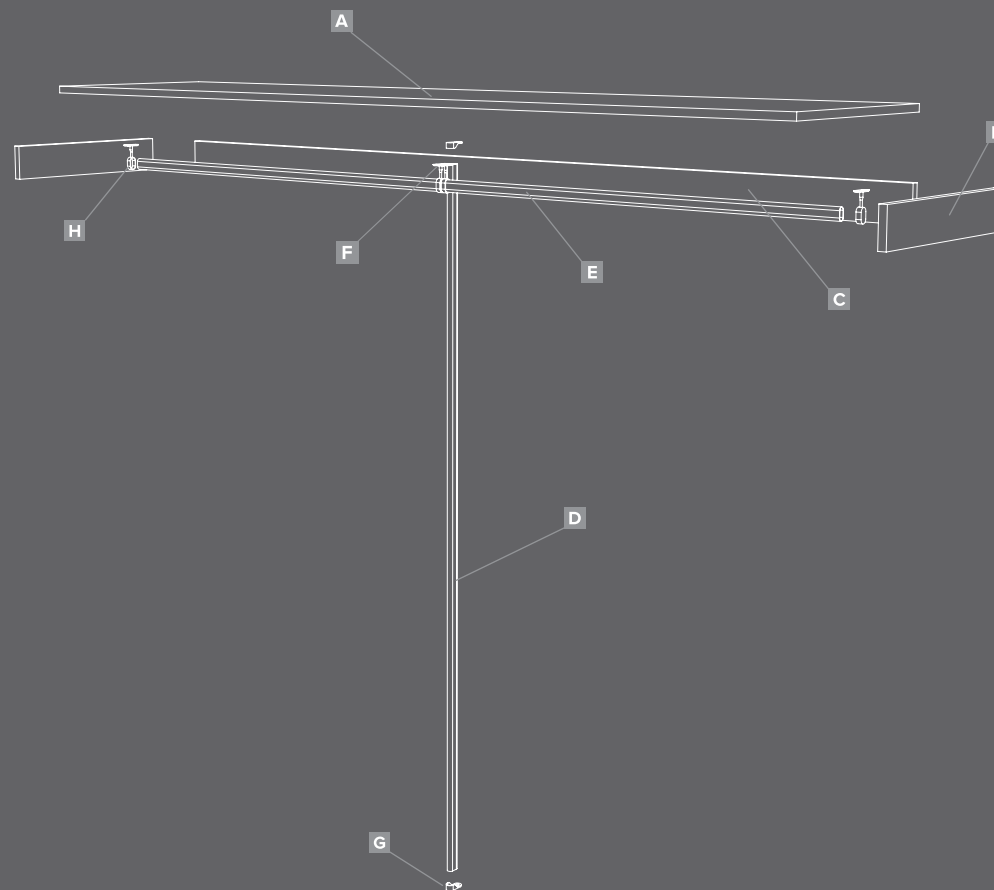

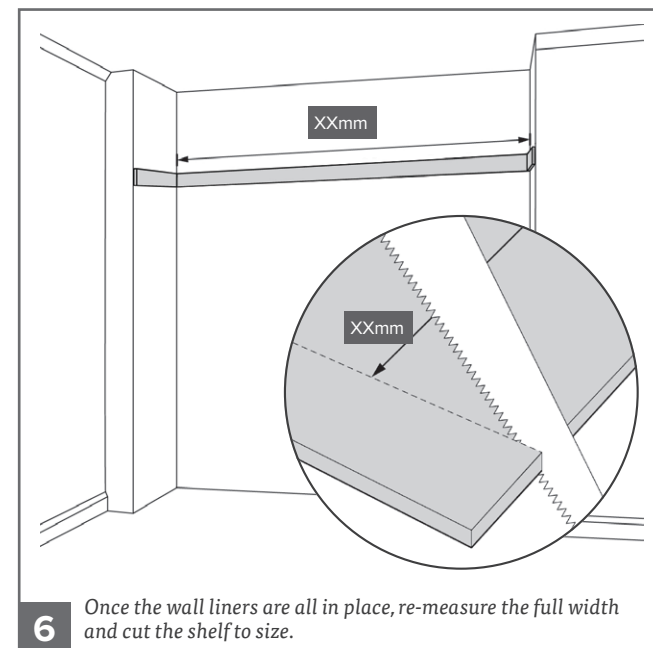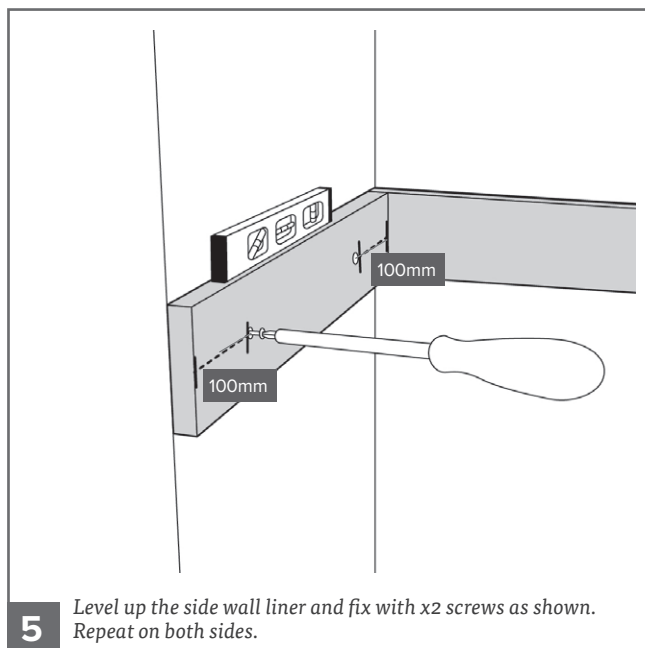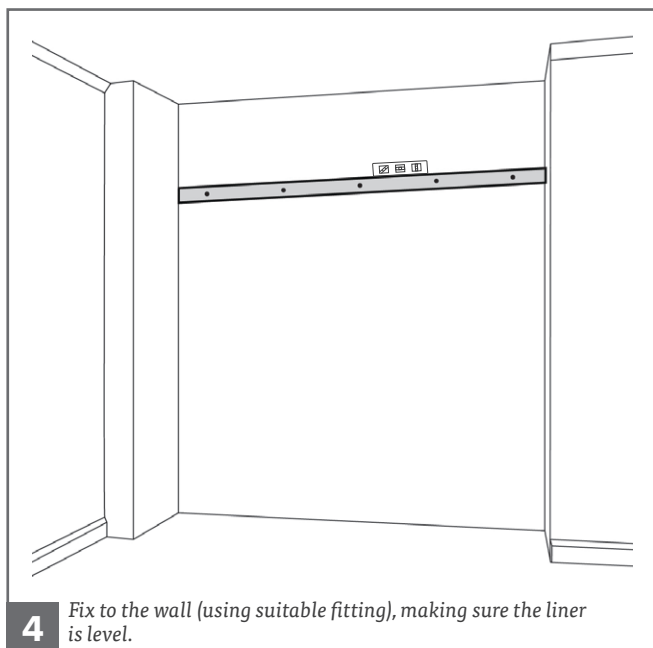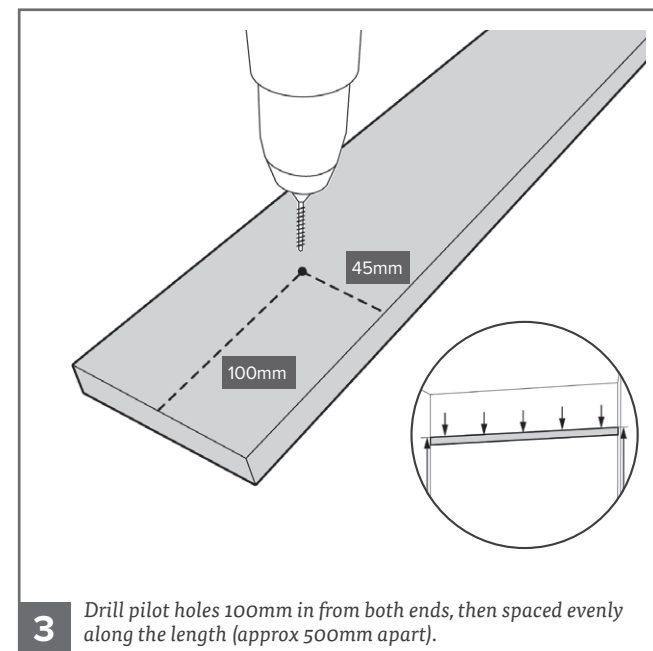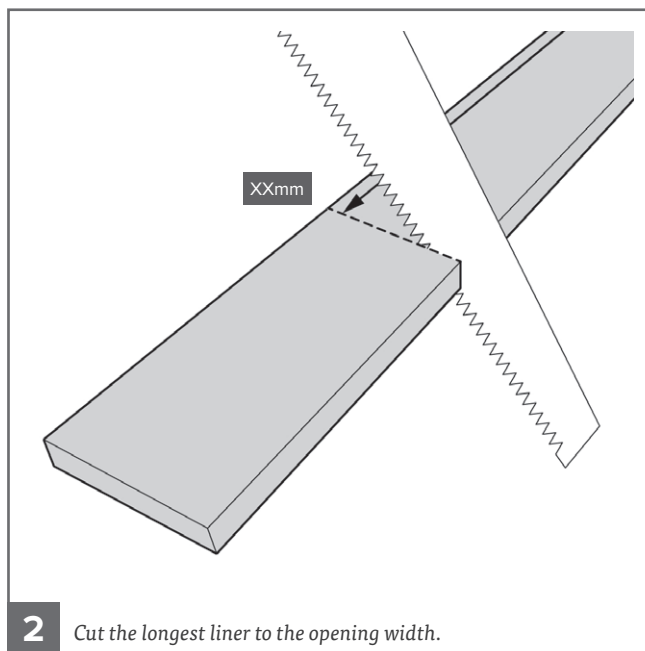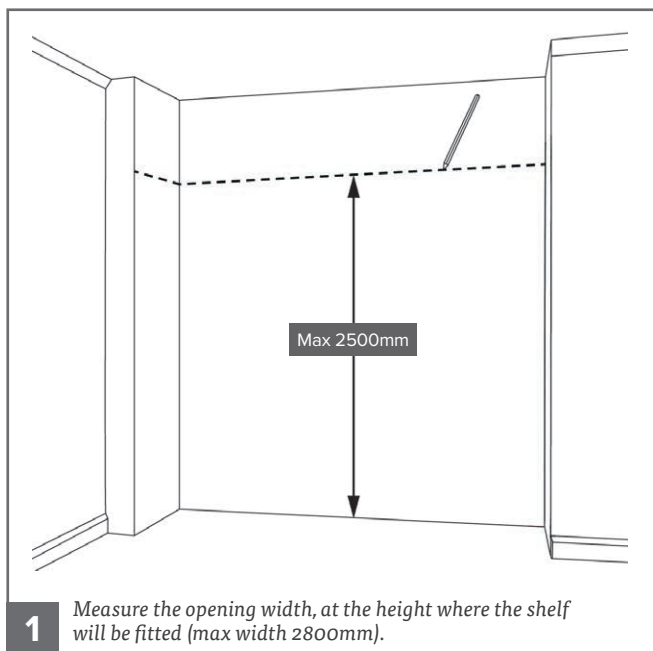


Top view.

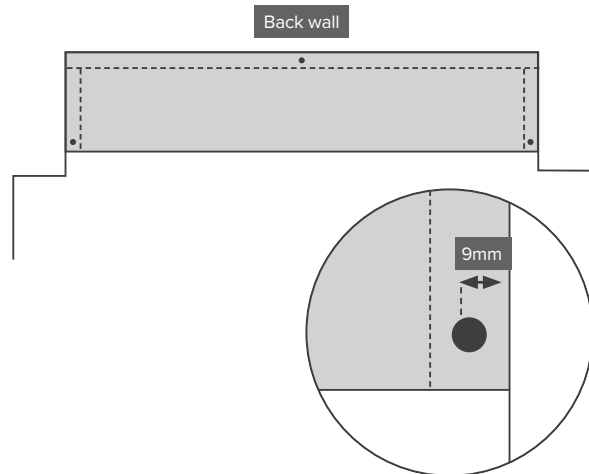


7

Slide the shelf on top of the liners. Fix in place using 30mm screws in the 2 front corners and middle back (as shown).

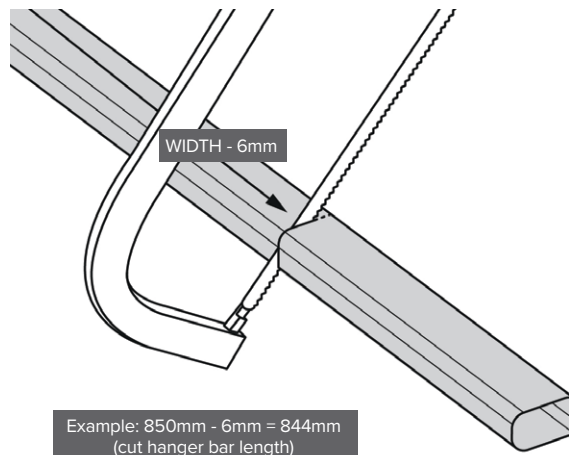


8

Measure between both side wall liners and cut the hanger to size. Deduct 6mm from the measurements, allowing space for each bracket to be fitted.

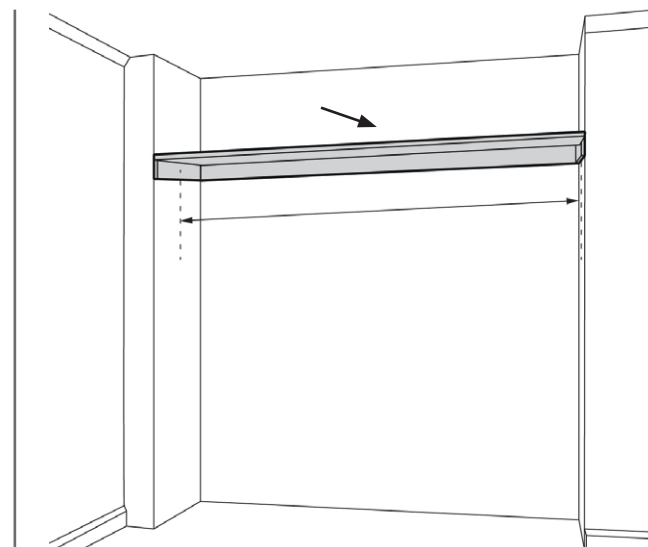


! IMPORTANT: Make sure the bracket is flush to the side wall liner.

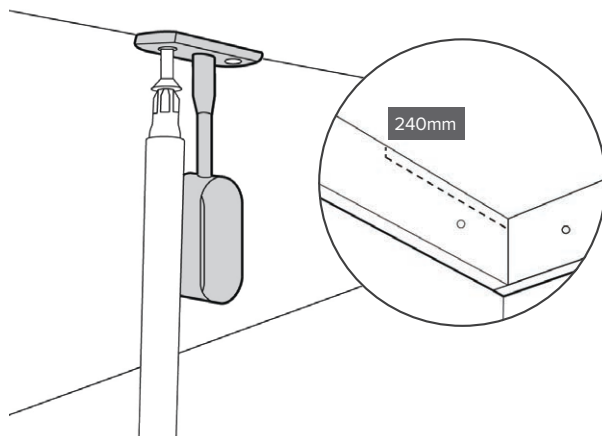

9


Centre the side bracket 240mm in from the back liner and fix to the shelf using screws provided.

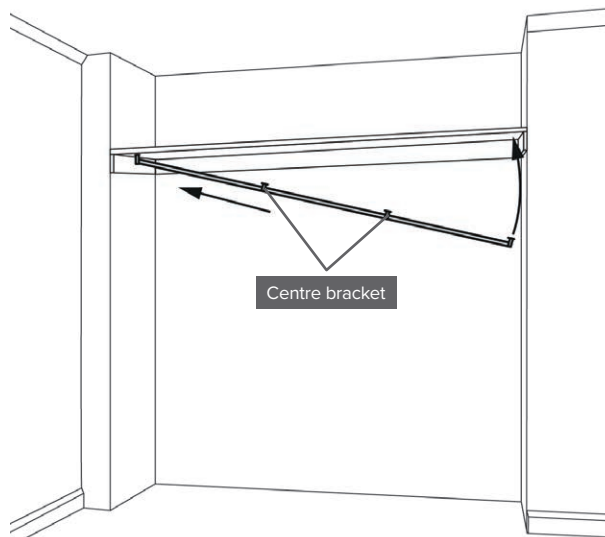


10

Before the hanger is put into position, slide the centre bracket/brackets onto the bar, then place the opposite side bracket on the end and secure into position. Once secured, fix the middle bracket/brackets evenly spaced along the shelf.

Note: If supplied with 1 centre bracket, position in the centre of the shelf. If 2 centre brackets are supplied, these should be spaced evenly.

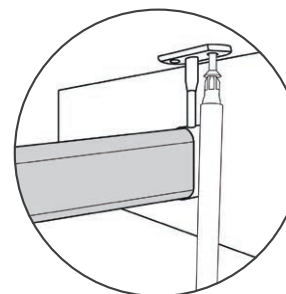

Side brackets

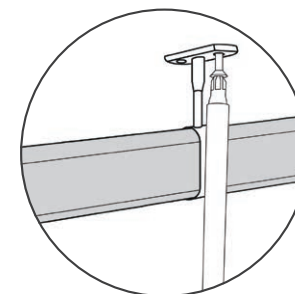


Centre bracket


Note: Some components may differ on aesthetic slightly, but fit the same as is shown.

If your opening space is wider than 1.2m then we recommend fitting the vertical support.


(Only supplied with larger shelving kits).

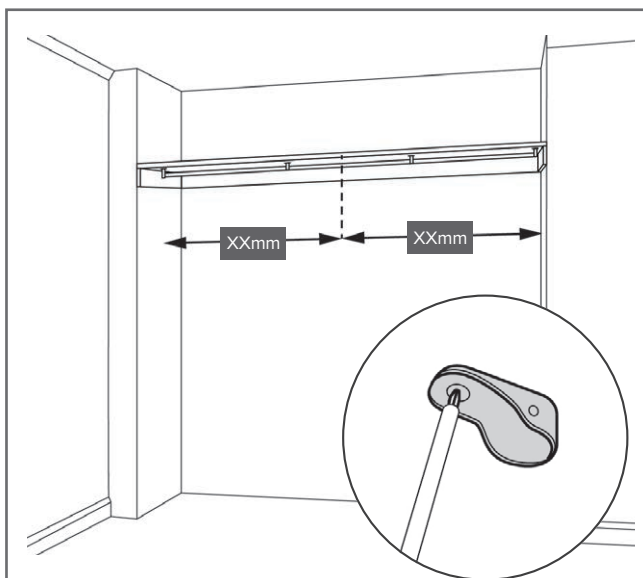


11 Measure to the centre of the shelf, approx 20mm behind the hanger bar and fix the U-bracket as shown.

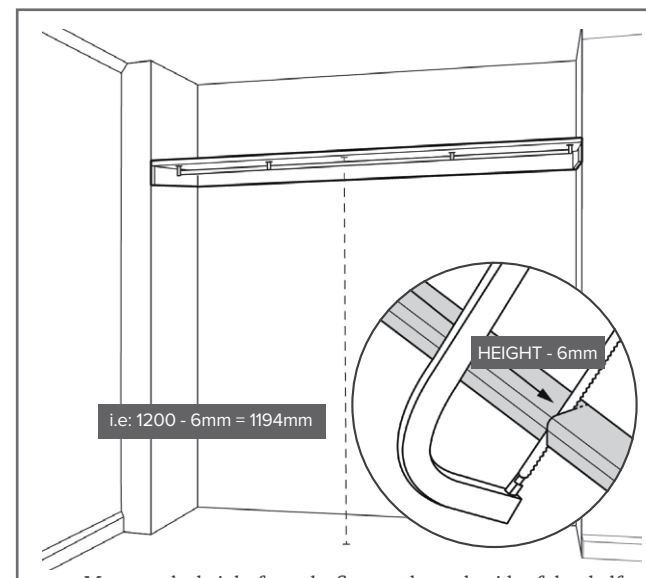

12 Measure the height from the floor to the underside of the shelf (and cut your vertical support to this length, deducting 6mm for the brackets).

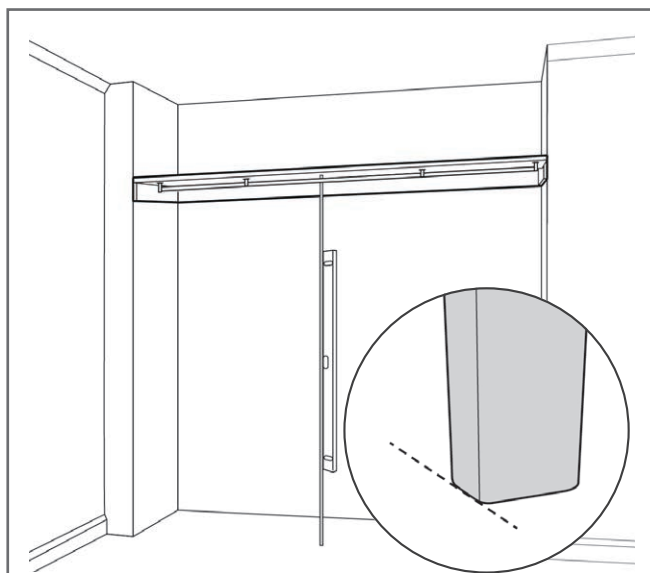

13 Insert the vertical support into place, making sure it is level, and mark the floor as shown.

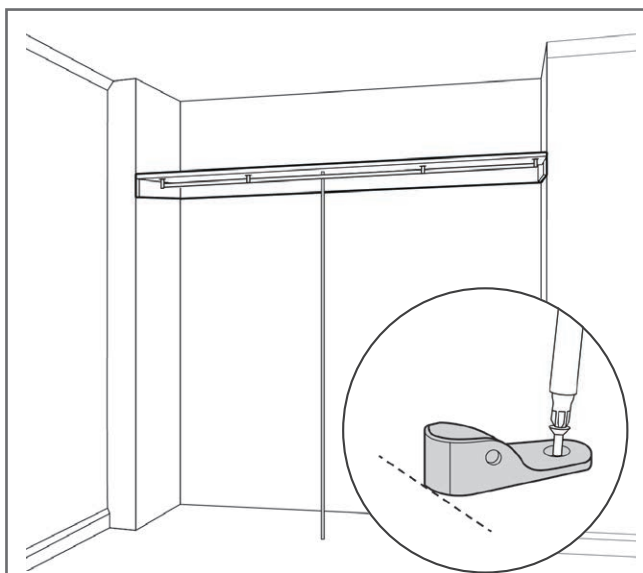

14 Fix the U-bracket to the floor (using suitable fixings), then place the vertical support back into position.

Note: Some components may differ on aesthetic slightly, but fit the same as is shown.

A GUIDE TO FIXINGS



Wall & Ceiling Fixings: You must first identify the type of wall or ceiling you intend to fix product onto and then contact your local hardware store if the fixings supplied are not suited to your wall or ceiling type. Care and Maintenance: Safety: Always check the fitting and location to ensure your safety in and around the home. Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

IMPORTANT NOTE: When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and plugs being used are suitable for supporting your unit. Always consult a qualified trades person if you are unsure.

Tips: 1. Ensure you use the recommended drill bit to match the wall plug and hole size.

Tips: 2. Ensure you drill the hole straight, do not force the drill or enlarge the hole.


Tips: 3. Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

Tips: 4. Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Structures:


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

1: General Purpose / Concrete or Block Work wall plug. NOT supplied.

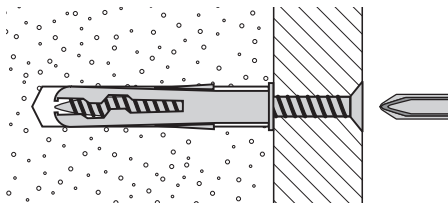


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

2: Plasterboard wall plug. NOT supplied.

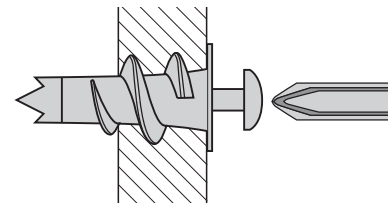


For use when attaching light loads on to plasterboard partitions.

3: Cavity Fixing wall plug. NOT supplied.

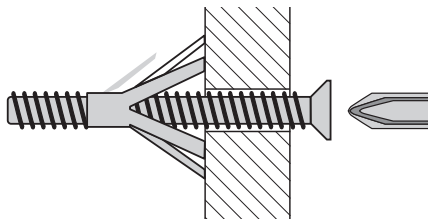

For use with plasterboard partitions or hollow wooden doors.

4: Wooden Structure. NOT supplied.

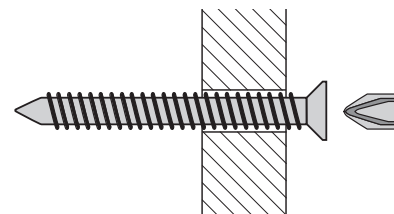

If you know you are fixing directly into a wooden batten, the screws provided do not require a plug.