2 DRAWER STORAGE UNIT

(450mm wide)

Assembly Instructions

CONTENTS:

- **A** *1x Top panel*
- **B** *1x Back panel*
- **C** *1x Side panel (right)*
- **D** *1x Side panel (left)*
- **E** *1x Drawer infill panel*
- **F** *1x Base*
- **G** *4x Soft close drawer runners (2x left, 2x right)*
- **H** *1x Metal infill strip*
- **I** *2x Drawer backs*
- **J** *2x Drawer sides (left)*
- **K** *2x Drawer sides (right)*
- **L** *2x Drawer fronts*
- **M** *2x Drawer bases*

BEDSIDE UNIT PACK



12x Euro screws | *14x Cams* | *20x Wooden dowels* | *14x Dowels*

DRAWER PACK



4x Dowels | *16x Wooden dowels* | *4x Cams*

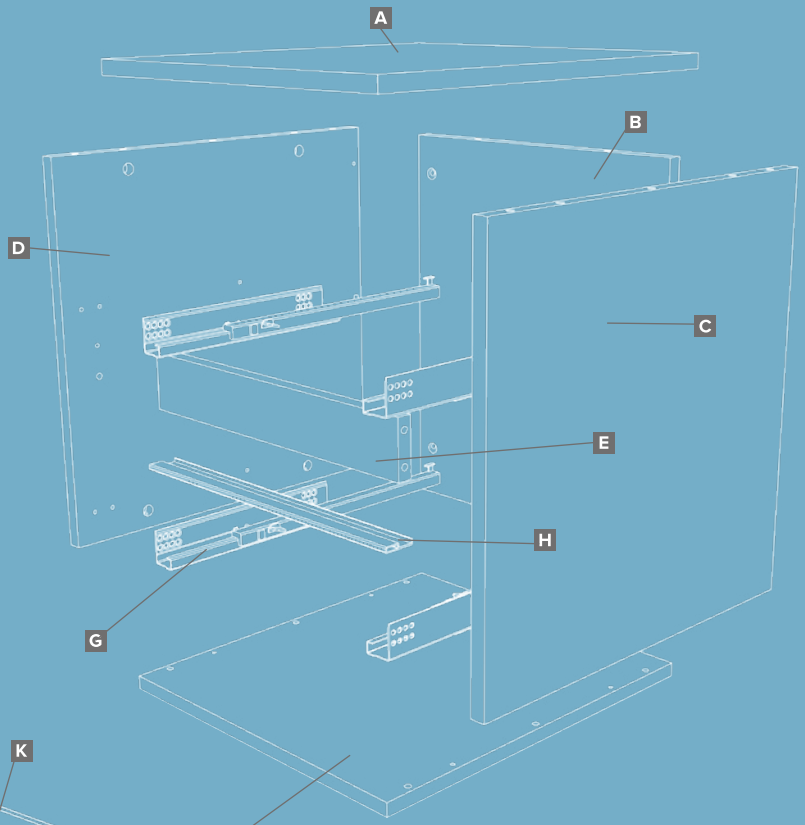

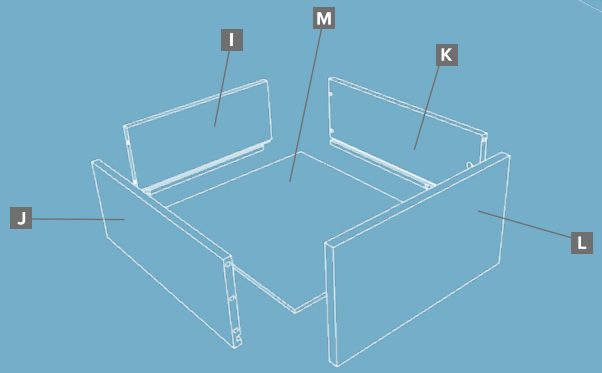

RECOMMENDED TOOLS: *Pozi screwdriver*

We recommend assembling on a soft surface (e.g a carpet). If this isn't possible, use a protective cover on your hard surface floor.

spaceslide®
we make room

V2

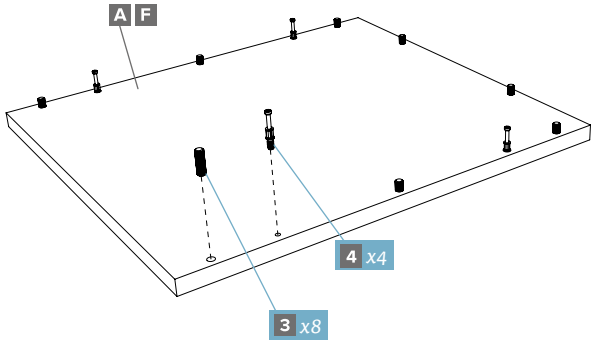

1 *Apply to both panels (A&F).*

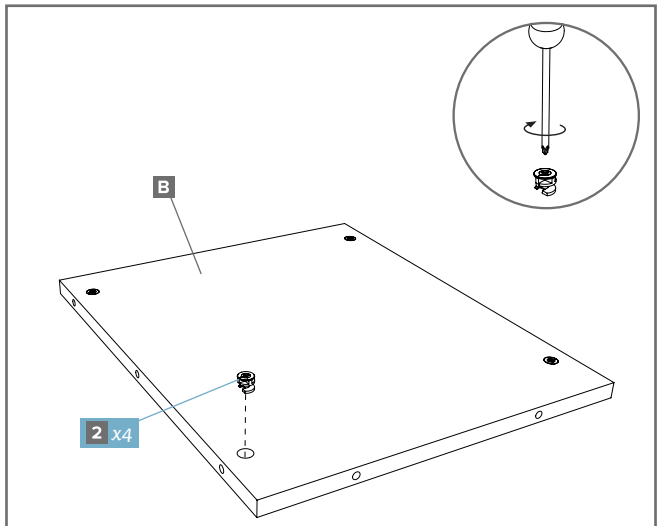

2

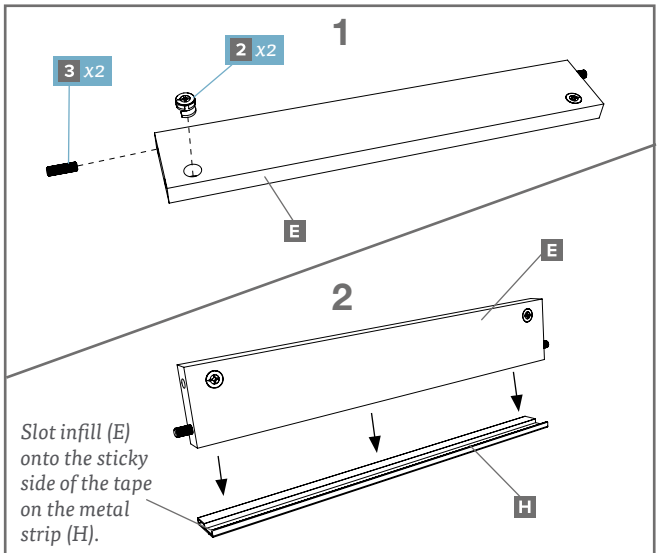

3 *1 - Insert the dowels and cams into the drawer infill (E).*
2 - On the metal strip (H) remove the plastic backing from the double-sided tape then stick the metal strip to the infill (E).

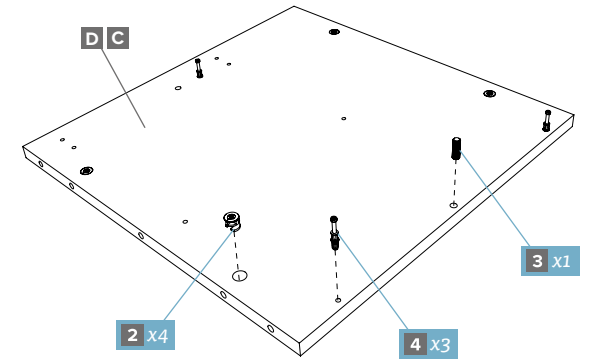

4 *Apply to both panels (D&C).*

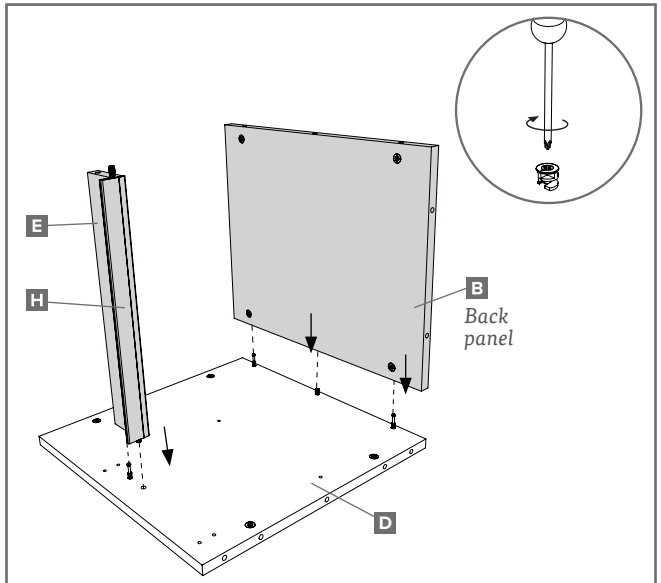

5 *Lay panel (D) on a flat surface. (Shown from the side).*

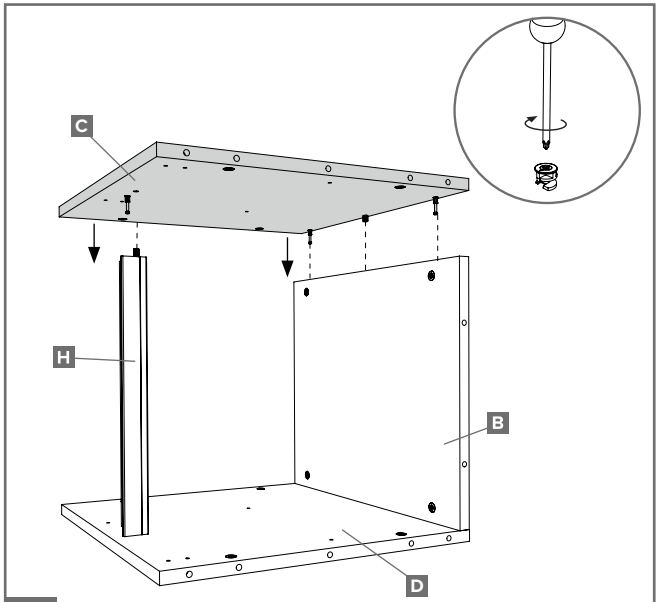

6

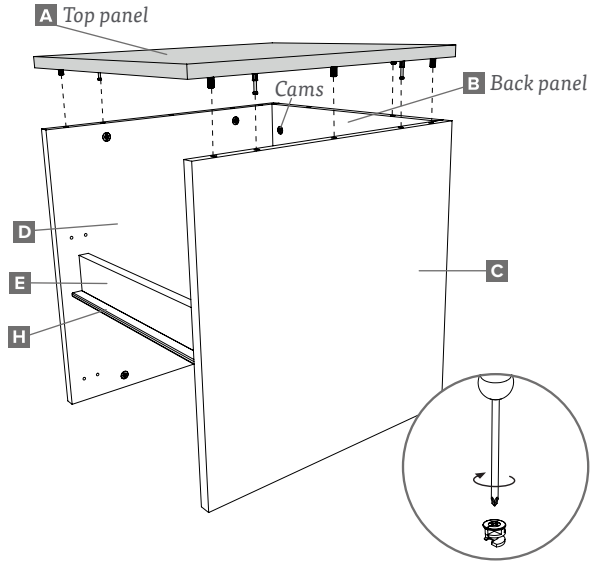

7 *If the top panel (A) won't locate, loosen the cams in the back panel (B).*

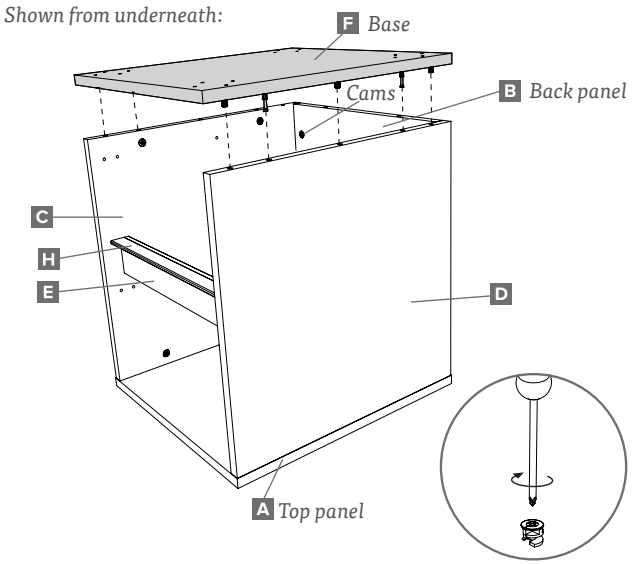

8 *If the base panel (F) won't locate, loosen the cams in the back panel (B). Once in place, tighten the cams.*

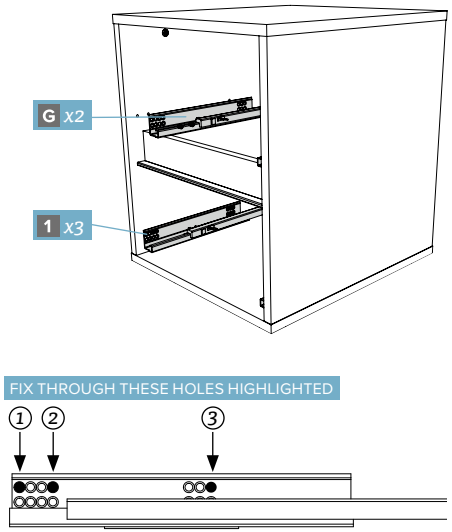

9 *Insert the screws into the holes shown on both sides (D & C). Left-hand runner shown above.*

MAKING THE DRAWERS

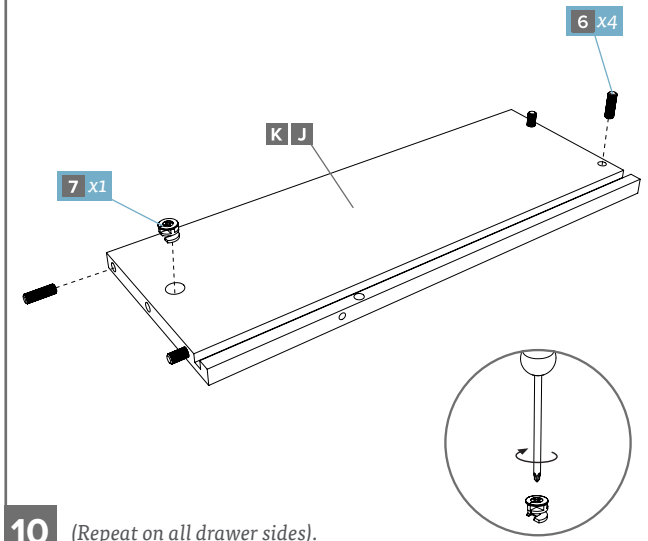

10 *(Repeat on all drawer sides).*

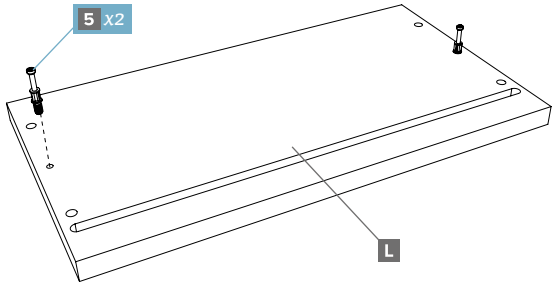

11 *(Repeat on all drawer fronts).*

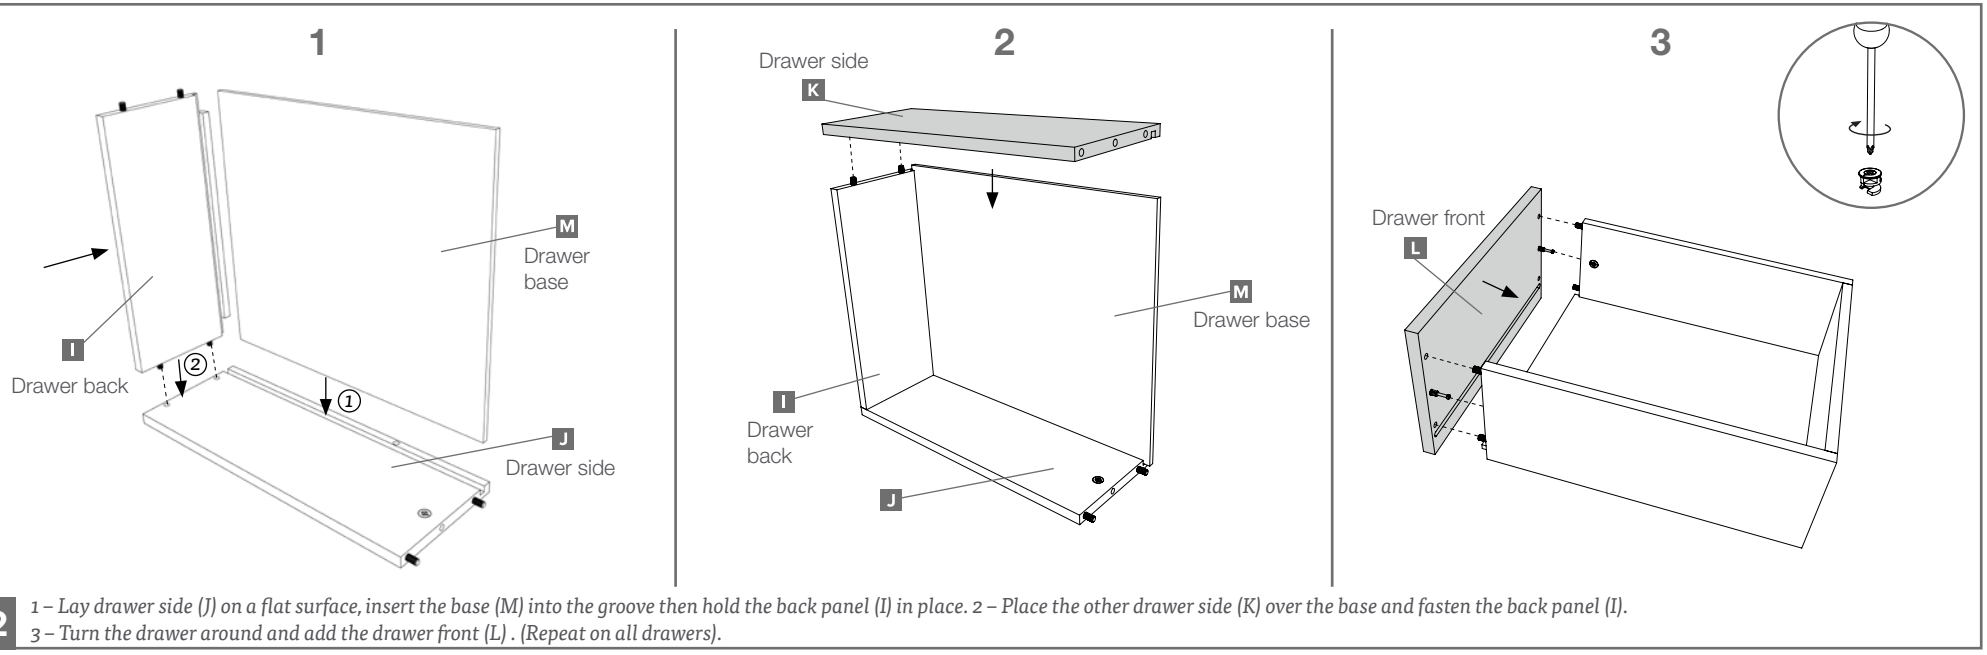

12 *1 – Lay drawer side (J) on a flat surface, insert the base (M) into the groove then hold the back panel (I) in place. 2 – Place the other drawer side (K) over the base and fasten the back panel (I). 3 – Turn the drawer around and add the drawer front (L) . (Repeat on all drawers).*

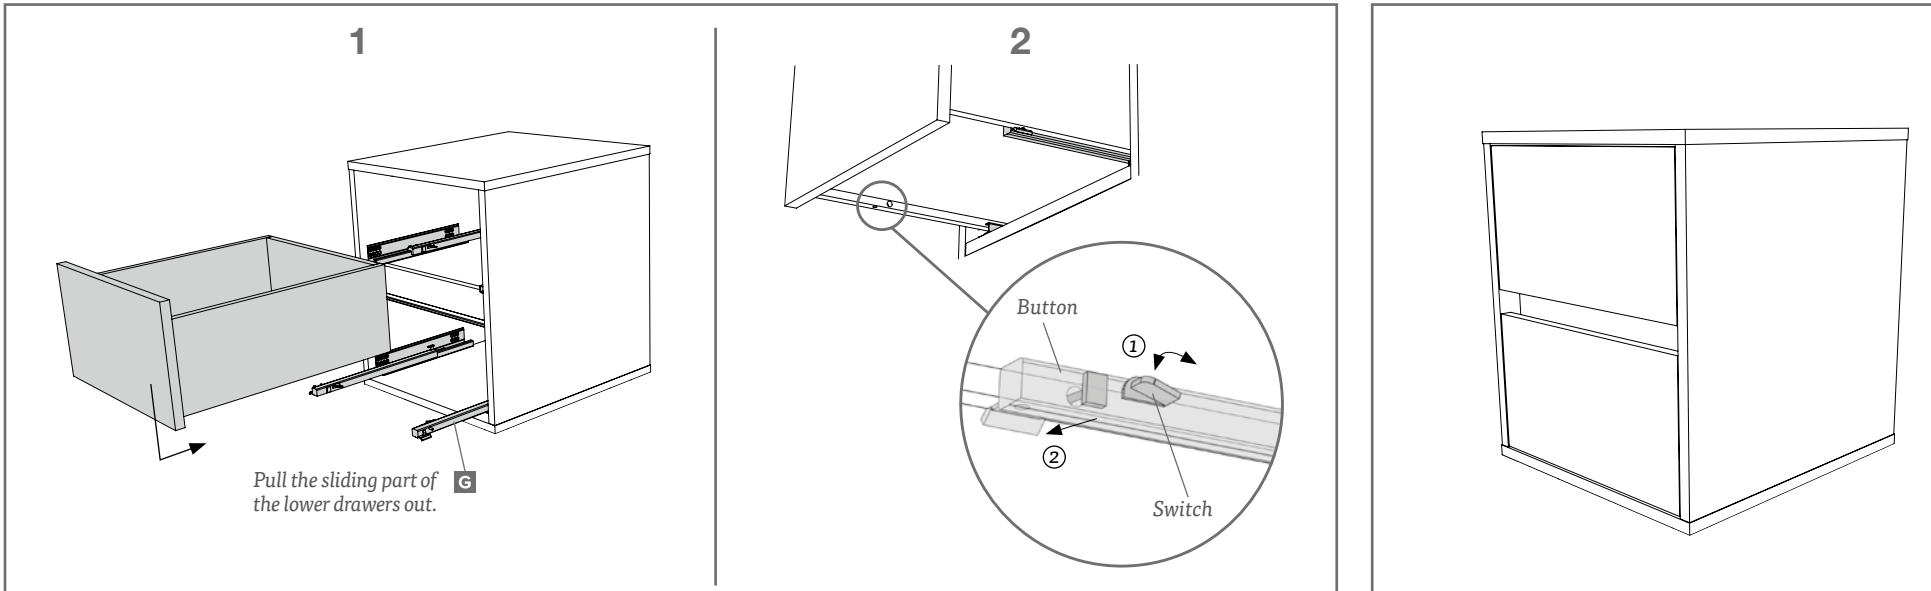

13 *1 - Pull the sliding part of the lower drawer out and sit the base of the drawer on top. Turn the switch to adjust the height of the drawer on each side. 2 - Push the button to lock the drawer runner (G) onto the drawer. Repeat for all drawers. To remove a drawer, reverse the operation.*